MWF+ (LCD) RS485 BACnet MS/TP

Average temperature sensor

Datasheet

USEapp

Subject to technical alteration Issue date: 13.03.2023 • A123



The following illustrations show the version with LCD

thermokor

HOME OF SENSOR TECHNOLOGY

» APPLICATION

Duct averaging temperature sensor in enclosure USE-M for measuring the average temperature in air ducts. The sensor detects the applied temperature value throughout the entire length. LCD models with RGB background light have a transparent cover. Display configuration and threshold values for color changes can be parameterized via Thermokon USEapp.

» TYPES AVAILABLE

Duct averaging sensor temperature optional with Display - active RS485 BACnet

• MWF+ (LCD) RS485 BACnet L<x> incl. Installation kit

<x>: sensor rod length 3000/6000 mm

» SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

»PRODUCT TESTING AND CERTIFICATION

Declaration of conformity The declaration of conformity of the products are available on our website <u>https://www.thermokon.de/</u>.

»NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage $(\pm 0, 2 \text{ V})$ this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

»USE ENCLOSURE WITH UV AND WEATHER RESISTANCE

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

» TECHNICAL DATA

Measuring values	temperature				
Output voltage	010 V or 05 V, min load $10k\Omega$ (live-zero configuration via Thermokon USEapp)				
Network technology	RS485 BACnet, Fail-safe Biasing required				
Power supply	1535 V = or 1929 V ~				
Power consumption	max. 2,3 W (24 V =) max. 4,3 VA (24 V ~)				
Output signal range temp. *Scaling analogue output	-20+80 °C (default setting), selectable from 8 temperature ranges -50+50 -20+80 -15+35 -10+120 0+50 0+100 0+160 0+250 °C, optionally configurable via Thermokon USEapp				
Operating temperature range * Max. permissible operating temperature	sensor rod -30+70 °C	electronic enclosure with LCD -20+70 °C	electronic enclosure without LCD -35+70 °C	mounting base -35+90 °C	
Accuracy temperature	±0,5 K (typ. at 21 °C)				
Display	LCD 29x35 mm with RGB backlight				
Enclosure	enclosure USE-M, PC, pure white, cover PC, with LCD transparent, with removable cable entry				
Protection	IP65 according to EN 60529				
Cable entry	M25, for wire max. Ø=7 mm, seal insert for fourfold cable entry				
Connection electrical	Mainboard removable plug-in terminal, max. 2,5 mm²		Plug-in card removable plug-in terminal, max. 1,5 mm ²		
Sensor rod	3000 mm, 6000 mm				
Ambient condition	max. 85% rH short term condensation				

»CONFIGURATION



The Thermokon bluetooth dongle with micro-USB (Item No.: 668262) is required for communication between USEapp and USE-M / USE L products. Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

» APPLICATION NOTICE



The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.


» MOUNTING ADVICES

Model MWF can either be mounted directly on the ventilation duct by means of a mounting flange or by screws.

By means of the mounting brackets included the sensor rod is braced to the ventilation duct.

Note: Please pay attention to the sensor rod while mounting and protect it from mechanical damage!

Mounting angle:

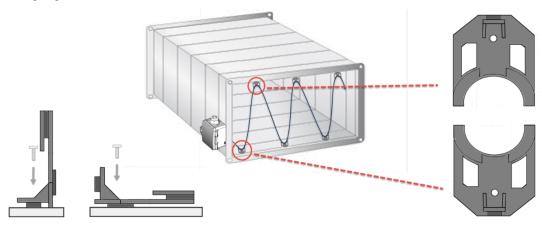

Vertical mounting

Horizontal mounting

*factory default settings


» CONNECTION PLAN

To change the output voltage range (default 0..10 V to 0..5 V) via jumper, the display must be removed from the board first. With looped-through RS485 cabling, connect both cable shields using the supplied 2-pole terminal as shown.

When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all "positive" operating voltage input terminals (+) of the field devices are connected and all "negative" operating voltage input terminals (-) (=reference potential) are connected (in-phase connection of field devices). In the case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device.

The consequential short-circuit current flowing through this field my cause damage to it. Therefore, pay attention to correct wiring.



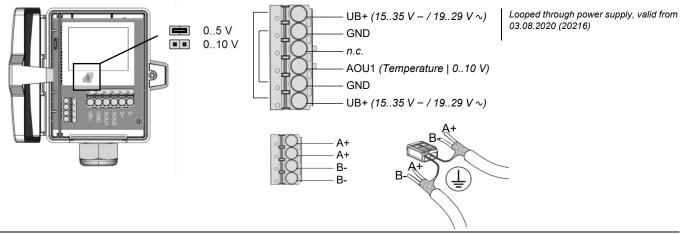

» DIP SWITCHES, PLUG-IN CARD

The BACnet address of the device is set binary coded in the range of 1 ... 127 via 7 dip-switches. (the address 0 is reserved and cannot be selected).

Termination 120 Ω Image: state s	B A Swäch1 ON ELS 22	BACnet adress DN=2 ⁰ (1)* ON=2 ¹ (2)	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$
Baud ON 2 3 9600* 0N 2 3 19200	Switch2		
ON 0 2 3 38400 76800	•	$ \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \end{array}{0} \\ \end{array}{0} \\ \end{array}{0} \\ \end{array} $ $ \begin{array}{c} \end{array}{0} \\ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array}{0} \\ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array}{0} \\ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array}{0} \\ \end{array} $ $ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array}{0} \\ \end{array} $ $ \end{array} $	Adress-Bsp.: 2+8+16+32+64=122


			Object AV-38 = 1 (Unit SI)	Object AV-38 = 2 (Unit Imperial)	
Obje	ct Access	Description	COV increment / Unit	COV increment / Unit	
AI-	0 R	Temperature 1	0+250 °C °C	0+480 °F °F	



BACnet Objects, PICS and BIBBs:

USE-RS485 BACnet interface

A detailed description of the BACnet interface can be found at the following link: Download

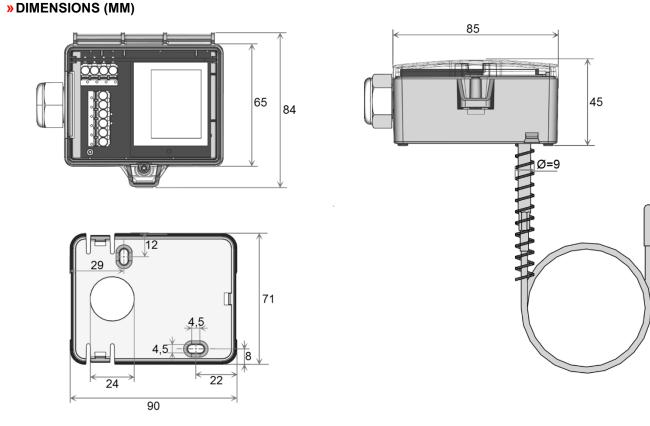

»ACCESSORIES (INCLUDED IN DELIVERY)

Sensor rod mounting angle set Mounting base USE-M Mounting kit universal • Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)	Item No. 679466 Item No. 631228 Item No. 698511
--	---

»ACCESSORIES (OPTIONAL)

Bluetooth dongle RS485 Biasing Adapter Cable entry M25 USE white, sealing insert 4x Ø=0.28 in. (4 pcs) Item No. 668262 Item No. 811378

Item No. 641364