

Technical data sheet

Rotary actuator with fail-safe for ball valves

- Torque motor 20 Nm
- Nominal voltage AC 24...240 V / DC 24...125 V
- Control Open/close
- Deenergised open (NO)
- with 2 integrated auxiliary switches



Technical data

| Electrical data | Nominal voltage | AC 24240 V / DC 24125 V |
|-----------------|--|---|
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.2264 V / DC 21.6137.5 V |
| | Power consumption in operation | 7 W |
| | Power consumption in rest position | 3.5 W |
| | Power consumption for wire sizing | 18 VA |
| | Auxiliary switch | 2 x SPDT, 1 x 10% / 1 x 1190% |
| | Switching capacity auxiliary switch | 1 mA3 A (0.5 A inductive), AC 250 V |
| | Connection supply / control | Cable 1 m, 2 x 0.75 mm ² |
| | Connection auxiliary switch | Cable 1 m, 6 x 0.75 mm ² |
| | Parallel operation | Yes (note the performance data) |
| Functional data | Torque motor | 20 Nm |
| | Torque fail-safe | 20 Nm |
| | Direction of motion fail-safe | Deenergised NO, valve open $(A - AB = 100\%)$ |
| | Manual override | by means of hand crank and locking switch |
| | Running time motor | 75 s / 90° |
| | Running time fail-safe | <20 s / 90° |
| | Running time fail-safe note | @ -2050°C / <60 s @ -30°C |
| | Sound power level, motor | 45 dB(A) |
| | Position indication | Mechanical |
| | Service life | Min. 60'000 fail-safe positions |
| Safety | Protection class IEC/EN | II reinforced insulation |
| | Protection class UL | II reinforced insulation |
| | Protection class auxiliary switch IEC/EN | Il reinforced insulation |
| | Degree of protection IEC/EN | IP54 |
| | Degree of protection NEMA/UL | NEMA 2 |
| | Enclosure | UL Enclosure Type 2 |
| | EMC | CE according to 2014/30/EU |
| | Low voltage directive | CE according to 2014/35/EU |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| | Certification UL | cULus according to UL60730-1A, UL60730-2- 14 and CAN/CSA E60730-1:02 |
| | Certification UL note | The UL marking on the actuator depends on the production site, the device is UL-compliant in any case |
| | Mode of operation | Type 1.AA.B |
| | Rated impulse voltage supply / control | 4 kV |
| | Rated impulse voltage auxiliary switch | 2.5 kV |
| | Control pollution degree | 3 |
| | Ambient temperature | -3050°C |
| | Storage temperature | -4080°C |
| | Ambient humidity | Max. 95% r.H., non-condensing |
| | Servicing | maintenance-free |
| Waight | 0 | |
| Weight | Weight | 2.2 kg |

Rotary actuator fail-safe, Open/close, AC 24...240 V / DC 24...125 V, 20 Nm, with 2 integrated auxiliary switches



| Safety notes | |
|------------------------------|--|
| $\underline{\land}$ | This device has been designed for use in stationary heating, ventilation and air- conditioning systems and must not be used outside the specified field of application especially in aircraft or in any other airborne means of transport. |
| | Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet. |
| | Caution: Power supply voltage! |
| | Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation. |
| | • The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user. |
| | Cables must not be removed from the device. |
| | The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed. |
| | The two switches integrated in the actuator are to be operated either on power supply voltage or at safety extra-low voltage. The combination power supply voltage safety extra-low voltage is not permitted. |
| Product features | |
| Mode of operation | The actuator is equipped with a universal voltage feed module that can utilise supply voltages of AC 24240 V and DC 24125V. The actuator moves the valve to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted. |
| Simple direct mounting | Simple direct mounting on the ball valve with only one screw. The mounting orientatio in relation to the ball valve can be selected in 90° steps. |
| Manual override | By using the hand crank the valve can be operated manually and engaged with the |
| Wandal Overnde | locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage. |
| Adjustable angle of rotation | |
| | applying the operating voltage. |

| \land | Notes | Caution: Power supply voltage! Parallel connection of other actuators possible. Observe the performance data. |
|---------|-------|--|


Electrical installation



Electrical installation


Wiring diagrams

AC 24...240 V / DC 24...125 V, open/close

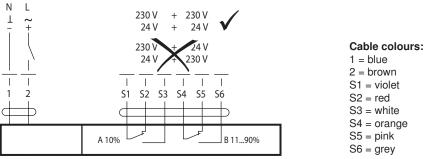

Operating controls and indicators

Auxiliary switch settings

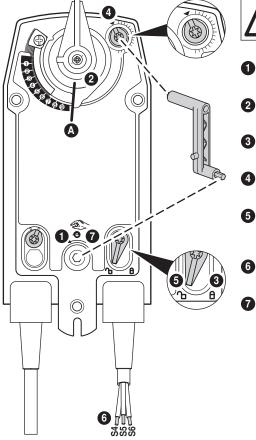

S3 = white S4 = orange S5 = pink

Note: Perform settings on the actuator only in deenergised state.

Manual override 1

Turn the hand crank until the desired switching position is set.

2 Spindle clamp

Edge line (A) displays the desired switching position of the actuator on the scale.

Fasten the locking device 3

Turn the locking switch to the "Locked padlock" symbol.

Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

Unlock the locking device 5

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable

Connect continuity tester to S4 + S5 or to S4 + S6.


7 Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



Dimensions [mm]

Dimensional drawings

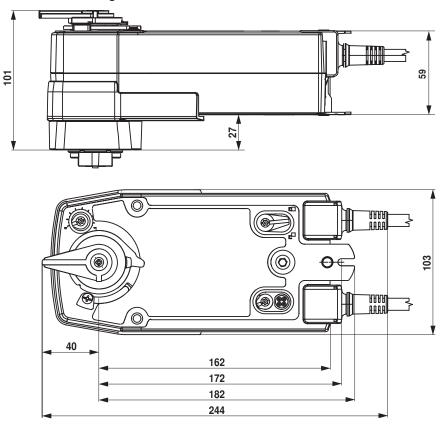

Further documentation

- The complete product range for water applications
- Data sheets for ball valves
- · Installation instructions for actuators and/or ball valves
- General notes for project planning