ExMax ¼ turn actuators – size S

ExMax - ... - Y
ExMax - ... - YF
ExMax - ... - CTS
ExMax - ... - VAS

Subject to change!

Electrical, explosion proof rotary actuators
3-pos. / 0...10 V DC / 4...20 mA control mode, with feedback, 24...240 V AC/DC, 95° angle of rotation
5/10 Nm, 15/30 Nm without and 5/10 Nm, 15 Nm with safety operation (spring return)
ATEX tested in acc. with directive 2014/34/EU for zone 1, 2, 21, 22

Compact. Easy installation. Universal. Cost effective. Safe.

Type	Torque	Supply	Motor running time	Spring return	Control mode	Feedback	Wiring diagram
ExMax- 5.10 - Y	5 / 10 Nm	24...240 V AC/DC	7,5 / 15 / 30 / 60 / 120 s/90°	–	3-pos., 0...10 V DC, 4...20 mA	0...10 V DC, 4...20 mA	SB 5.0 – 5.3
ExMax-15.30 - Y	15 / 30 Nm	24...240 V AC/DC	7,5 / 15 / 30 / 60 / 120 s/90°	–	3-pos., 0...10 V DC, 4...20 mA	0...10 V DC, 4...20 mA	SB 5.0 – 5.3
ExMax- 5.10 - YF	5 / 10 Nm	24...240 V AC/DC	7,5 / 15 / 30 / 60 / 120 s/90°	3 or 10 s/90°	3-pos., 0...10 V DC, 4...20 mA	0...10 V DC, 4...20 mA	SB 5.0 – 5.3
ExMax- 15 - YF	15 Nm	24...240 V AC/DC	7,5 / 15 / 30 / 60 / 120 s/90°	3 or 10 s/90°	3-pos., 0...10 V DC, 4...20 mA	0...10 V DC, 4...20 mA	SB 5.0 – 5.3
ExMax- ... - CTS	Types as above with aluminium housing and seawater resistant coating (cable glands brass nickel-plated)						
ExMax- ... - VAS	Types as above with stainless steel housing for aggressive ambient (cable glands brass nickel-plated)						

Product views and applications

Safety damper

Ball valve

Throttle valve

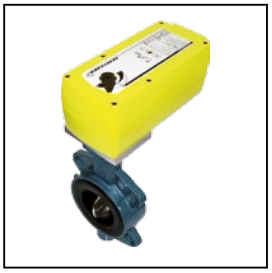

Description

The ExMax actuators are a revolution for safety, control and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in Ex-areas zone 1, 2 (gas) and zone 21, 22 (dust).

Highest protection class (ATEX) and IP66 protection, small dimensions, only 3,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times and torques as well as spring return times, according to the actuator type, are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 V AC/DC. Furthermore it is possible to perform control signal inverting and compulsion control by certain connections. The actuators are 100 % overload protected and self locking.

...Max-...-YF actuators are equipped with spring return fail safe function. Standard shaft connection is a double square direct coupling with 12 × 12 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptions for ball valves and throttle valves and other armatures.

Highlights

- ▶ For all type of gas, mists, vapours and dust for use in zone 1, 2, 21 and 22
- ▶ Universal supply unit from 24…240 V AC/DC
- ▶ 5 different motor running times 7,5–15–30–60–120 s/90°, adjustable on site
- ▶ 2 different spring return running times ~ 3–10 s/ 90°, selectable on site
- ▶ 3-pos. and 0...10 V DC, 4...20 mA control mode with or without spring return function
- ▶ Feedback signals 0...10 V DC and 4...20 mA
- ▶ Reverse function
- ▶ 5–10–15–30 Nm actuators in the same housing size
- ▶ 100 % overload protected and self locking
- ▶ Compact design and small dimension (L × W × H = 210 × 95 × 80 mm)
- ▶ Direct coupling to the damper shaft with double square connection 12 × 12 mm
- ▶ 95° angle of rotation inclusive 5° pretension
- ▶ Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
- ▶ IP66 protection
- ▶ Simple manual override included + preparation for comfortable manual override
- ▶ Gear made of stainless steel and sinter metal
- ▶ Weight only ~ 3,5 kg
- ▶ Integrated heater for ambient temperatures down to −40 °C
- ▶ Integrated safety temperature sensor
- ▶ Integrated equipment for manual adjustment (push button, lamp, switch)
- ▶ Preparation for adaptable and adjustable auxiliary switches type ...Switch

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com

Technical data	ExMax- 5.10 -Y	ExMax- 15.30 -Y	ExMax- 5.10 -YF	ExMax- 15 -YF
Torque motor (min.)	5 / 10 Nm selectable on site	15 / 30 Nm selectable on site	5 / 10 Nm selectable on site	15 Nm
Torque spring (F)	–	–	min. 10 Nm	min. 15 Nm
Torque blockade	In blockade and end positions torques are higher than above specified torques for motor and spring.			
Dimensioning of external load	Upon spring return the external load should be max. 80 % of torque spring (F), but min. 3 Nm			
Supply voltage / frequency	24...240 V AC/DC, ± 10 %, self adaptable, frequency 50...60 Hz ± 20 %			
Power consumption	max. starting currents see ⓘ Extra information (in acc. with voltage, I_{start} >> I_{rated}), approx. 5 W holding power, approx. 16 W for heater			
Protection class	Class I (grounded)			
Angle of rotation and indication	95° incl. ~ 5° pretension, mechanical value indication			
Working direction	Selectable by left/right mounting to the damper/valve shaft			
Motor running times	7,5 / 15 / 30 / 60 / 120 s/90° selectable on site			
Motor	Brushless DC motor			
Control mode Y	3-pos., 0…10 V DC, 4…20 mA in acc. with wiring, selectable on site. Galvanic separation between supply and Y-signal			
Feedback signal U	0…10 V DC, 4…20 mA in acc. with wiring, selectable on site, both signals are available at the same time			
Resistance of Y and U signals	**Input signal:** Y_U 0...10 V DC at 10 kΩ, Y_I 4...20 mA at 100 Ω. **Feedback signal:** U_U 0...10 V DC at 2.000...∞ Ω, U_I 4...20 mA at 0...800 Ω			
Reverse function	Bridge between terminals 3–4 (signal line) effects a reverse function of input and output signals (Y and U)			
Compulsion control	In modulation mode an On-off compulsion control can be performed by external connection/wiring independently from the modulating signal			
Adjustment of Y and U	In case of external mechanical limitation of the angle of rotation, it is possible to perform an adjustment drive started by pushing the button (T)			
Spring return (F)	–	–	spring return upon voltage interruption	
Spring return response time	–	–	up to 1 sec. after voltage interruption	
Spring return running time (F)	–	–	~ 3 or 10 s/90° selectable on site	
3 sec. mode – spring return	–	–	~ 3 to 4 s/90° angle of rotation acc. to external load	
Safety operations at 10 sec. (F)	–	–	min. 10,000 acc. to construction of damper and ambient	
at 3 sec. (F)	–	–	min. 1,000 acc. to construction of damper and ambient	
Axle of the actuator	Double square 12 × 12 mm, direct coupling, 100 % overload protected and self locking up to 15 Nm			
Electrical connection	2 cable glands ~ 1 m each, wire cross section 0.5 mm², equipotential bonding 4 mm².			
Connections in hazardous areas require an Ex-e terminal box!				
Diameter of cable	~ Ø 7.1 + 7.4 mm	~ Ø 7.1 + 7.4 mm	~ Ø 7.4 mm each	~ Ø 7.4 mm each
Cable gland	M16 × 1.5 mm			
Manual override	Use delivered socket wrench, max. 4 Nm			
Heater	Integrated, controlled heater for ambient temperature down to −40 °C			
Housing material	Aluminium die-cast housing, coated. Optional with seawater resistant coating (...-CTS) or stainless steel housing,			
№ 1.4581 / UNS-J92900 / similar AISI 316Nb (...-VAS)				
Dimensions (L × W × H)	210 × 95 × 80 mm, for diagrams see ⓘ Extra information			
Weight	~ 3,5 kg aluminium housing, stainless steel ~ 7 kg			
Ambients	Storage temperature −40…+70 °C, working temperature −40…+40 °C at T6 and −40…+50 °C at T5			
Humidity	0...90 % rH, non condensing			
Operating 7,5 sec. motor run time	at 24 V: S3 – 50 % ED intermittent mode (ED = duty cycle)			
≥ 15 sec. motor run time	at 15 / 30 / 60 / 120 s 100 % of ED is permitted			
Accuracy electrically	~ 100 steps			
Self adjustment	Before initial operation you need to start the self adjustment mode for “gentle” blockade and adjustment of rotation angle			
Wiring diagrams	SB 5.0 / 5.1 / 5.2 / 5.3			
Scope of delivery	Actuator with 2 × 1 m cable, 4 screws M4 × 100 mm, 4 nuts M4, Allen key for simple manual override			
Parameter at delivery	5 Nm, 30 s/90°	15 Nm, 30 s/90°	5 Nm, 30 s/90°	15 Nm, 30 s/90°

Approbations

ATEX directive	2014/34/EU
EC type-approved	PTB 04 ATEX 1028 X
IECEx certified	IECEx PTB 07.0057X
Approval for gas	II 2 (1) G Ex d [ia] IIC T6, T5
Types ...-CTS	II 2 (1) G Ex d [ia] IIB T6, T5
Approval for dust	II 2 (1) D Ex tD [iaD] A21 IP66 T80, T95°C
CE identification	CE № 0158
EMC directive	2014/30/EU
Low voltage directive	2014/35/EU
Enclosure protection	IP66 in acc. with EN 60529
EAC	№ TC RU C-DE.ГБ08.B.01510

Special solutions and accessories

...-CTS	Types in aluminium housing with seawater resistant coating, parts nickel-plated
...-VAS	Types in stainless steel housing, parts nickel-plated
ExBox-Y/S...	Ex-e terminal boxes for zone 1, 2, 21, 22
MKK-S	Mounting bracket for boxes type ...Box-... directly on actuator
ExSwitch	2 external aux. switches, adjustable for zone 1, 2, 21, 22
HV-S...	Comfortable manual override for...Max actuators size S
KB-S	Clamp for damper shafts Ø 10...20 mm and □ 10...16 mm
AR-12-xx	Reduction part for 12 mm square connection to 11, 10, 9 or 8 mm shafts
Kit-S8	Cable glands nickel-plated
Adaptions	for dampers and valves on request

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com

Electrical connection

All actuators are equipped with a universal supply unit working at a voltage range from 24...240 V AC/DC. The supply unit is self adjusting to the connected voltage!
The safety operation of the spring return function works if the supply voltage is cut.
For electrical connection inside hazardous areas an Ex-e terminal box, certificated in acc. with ATEX is required (e.g. ExBox).
An over-current protection fuse < 10 A has to be provided by installer.
Note: the initial current is appr. 2 A for 1 second.

Modulating / 3-pos. – with / without spring return SB 5.0

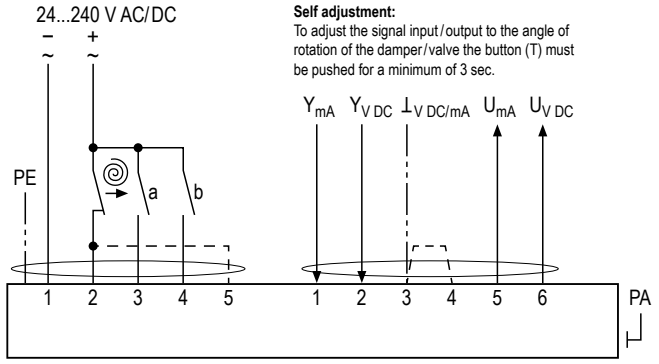

Self adjustment:
To adjust the signal input/output to the angle of rotation of the damper/valve the button (T) must be pushed for a minimum of 3 sec.

Selection of running time for spring return:
Spring return in ~ 10 s = Standard wiring
Spring return in ~ 3 s = Additional wiring on terminal 5

Reverse function:
Bridge 3–4 reverses the input and output signals

Function and enforcement control of switch a and b in modulating mode:
- **a** closed – **Forced-ON** (OFF) in acc. to left/right mounting of actuator
- **b** closed – **Forced-OFF** (ON) in acc. to left/right mounting of actuator

Modulating – with / without spring return (no enforcement) SB 5.1

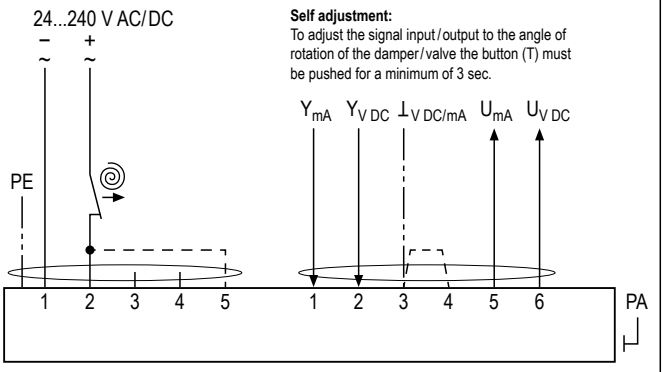

Self adjustment:
To adjust the signal input/output to the angle of rotation of the damper/valve the button (T) must be pushed for a minimum of 3 sec.

Selection of running time for spring return:
Spring return in ~ 10 s = Standard wiring
Spring return in ~ 3 s = Additional wiring on terminal 5

Reverse function:
Bridge 3–4 reverses the input and output signals

Modulating – with / without spring return (no feedback) SB 5.2

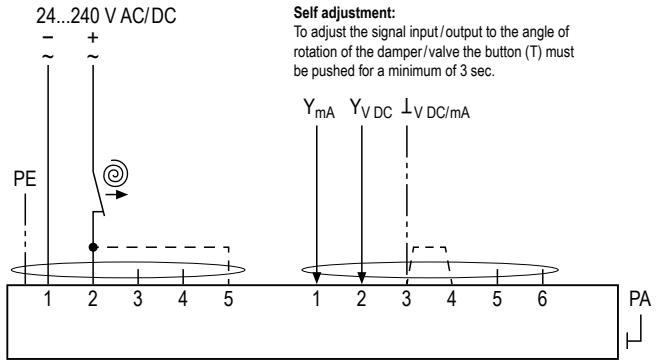

Self adjustment:
To adjust the signal input/output to the angle of rotation of the damper/valve the button (T) must be pushed for a minimum of 3 sec.

Selection of running time for spring return:
Spring return in ~ 10 s = Standard wiring
Spring return in ~ 3 s = Additional wiring on terminal 5

Reverse function:
Bridge 3–4 reverses the input signals

3-pos. – with / without spring return + feedback SB 5.3

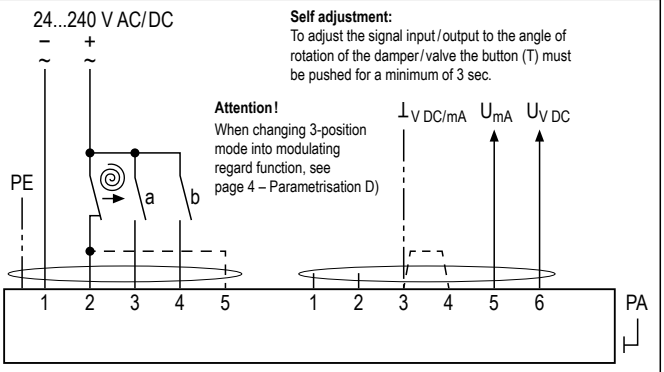

Self adjustment:
To adjust the signal input/output to the angle of rotation of the damper/valve the button (T) must be pushed for a minimum of 3 sec.

Attention!
When changing 3-position mode into modulating regard function, see page 4 – Parametrisation D)

Selection of running time for spring return:
Spring return in ~ 10 s = Standard wiring
Spring return in ~ 3 s = Additional wiring on terminal 5

Reverse function:
Bridge 3–4 reverses the output signals

3-pos. control mode:
- **a** closed, **b** open – **ON** (OFF) in acc. to left/right mounting of actuator
- **b** closed, **a** open – **OFF** (ON) in acc. to left/right mounting of actuator

Installation

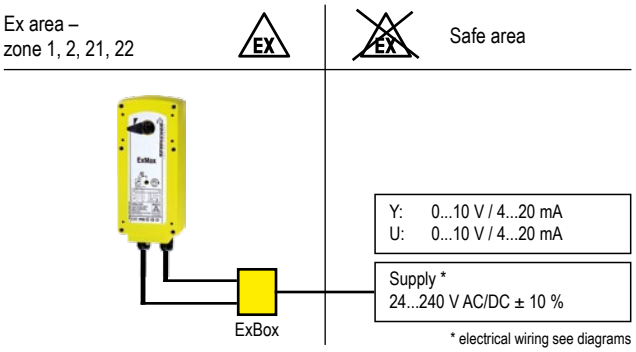

Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations for hazardous Ex-areas must be complied. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used.
For electrical connection an Ex-e terminal box is required (e.g. ExBox-...).
Attention: If the actuator is put out of operation all Ex rules and regulations must be applied. You have to cut the supply voltage before opening the terminal box!
The cables of the actuator must be installed in a fixed position and protected against mechanical and thermical damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66.
For outdoor installation a protective weather shield against sun, rain and snow should be applied to the actuator as well as a constant supply at terminal 1 and 2 for the integrated heater. During commissioning apply a self adjustment drive.

continue next page

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com

Important information for installation and operation

Actuators are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Ex-actuators must not be opened by the customer.

B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight. **Attention:** Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 12 × 12 mm. For round shafts adaptors/clamping connection (accessories, e.g. KB-S) are available. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

D. 3-position control mode

...Max actuators are in the best way suitable for the 3-pos. operation. To protect such elements as gears and mounting elements against harmful influences like minimum pulse time, ...Max actuators are protected via internal electronics. It ignores impulses < 0.5 s, the cyclic duration must be min. 0.5 s. At changing direction the pause is 1 s.

E. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

F. Operation at ambient temperatures below −20 °C

All actuators are equipped with a regulated integrated heating device designed for employments down to −40 °C ambient temperature. The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

1. After mounting the actuator must bei immediately electrically connected.
2. The heater switches on automatically when actuator reaches internally −20 °C. It heats up the actuator to a proper working temperature, then heater switches off automatically. Actuator will not run during heating process.
3. The adjustment options are only ensured after this heating up period.

G. Excess temperatures

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

H. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

I. Mechanical protection

Actuators must be operated with a minimum external load.
After installing the actuator to the damper/armature a self adjustment drive has to be performed in order to protect the damper/armature against mechanical overload.
During operation the actuator reduces briefly its speed (motor power) before reaching the end position for a “gentle” blockade/stop.

J. Intrinsically safe circuits

The actuator has a flameproof enclosure acc. to EN 60079. The supply of the push button (adjustment drive), the 10-position switch (adjustment of torque and running time) and the LED indicator is performed intrinsically safe!

ⓘ Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication

Parameters, adjustments and failure indication

Switch – Push button – Lamp for adjustment (behind the blanking plug)

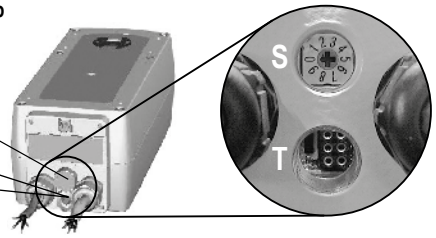

Parameter selection

Example:
ExMax-15.30-Y

Requested parameter:
Torque 30 Nm
Motor running time 30 s/90°

Result:
Switch position 07

Type		Torques	
ExMax- 5.10-Y	▶	5 Nm	10 Nm
ExMax- 15.30-Y	▶	15 Nm	**30 Nm**
ExMax- 5.10-YF	▶	5 Nm	10 Nm
ExMax- 15-YF	▶	15 Nm	
		▼	▼
Running times		**Position of switch (S)**	
7,5 s/90°	▶	00	05
15 s/90°	▶	01	06
30 s/90°	▶	02	**07**
60 s/90°	▶	03	08
120 s/90°	▶	04	09

Functions, adjustments and parameters

A) Self adjustment of angle of rotation
Turn switch (S) to position 02 (low torque) or 07 (high torque). Press button (T) for a minimum of 3 seconds. The actuator drives to both end positions and detects the blocking positions. The LED flashes GREEN during adjustment.
The adjustment takes about 60 seconds (30 sec. “On”, 30 sec. “Off”).

B) Selecting motor running time and torque
Adjust parameters only if actuator is in idle state or without applied potential.
Turn switch (S) to the position required for the intended operation acc. to table above. The selected parameters will be carried out at the actuator’s next operation.

C) Selecting spring return time
Spring return time is selected by wiring.

D) Changing modulating operation to 3-pos. operation with feedback
Modulating mode: The LED lights GREEN, potential applied.
Press button (T) briefly 3 times:
- each for at least 0.2 seconds
- altogether within max. 5 seconds

The LED changes from steady GREEN to steady YELLOW*.

E) Changing 3-pos. operation with feedback to modulating operation
3-pos. mode: The LED lights YELLOW*, potential applied.
Press button (T) briefly 3 times.
The LED changes from steady YELLOW* to steady GREEN.

F) Additional information for control in 3-pos. operation with feedback

a closed, b open	= direction I	a and b closed	= motor doesn’t work
b closed, a open	= direction II	a and b open	= motor doesn’t work

The rotation direction (I and II) depends on left/right mounting of the actuator to the damper. To reverse the rotation direction (by motor) exchange the electrical wiring of terminal 3 and 4.
In 3-pos. operation with feedback the Y-inputs are without function.

G) Inverting <=> Reverting
Bridging signal wires 3–4 (cable B) inverts the function of input signals Y and feedback signals U.

* Note: “YELLOW” may vary from yellowish to orange.

⚠ Attention ⚠

During commissioning apply a self adjustment drive.
Regard duty cycle at motor running times!
Never use spring return actuators without external load.

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info-de@schischek.com