


KULLANMA KILAVUZU


RT226-P1 ODA TERMOSTATI

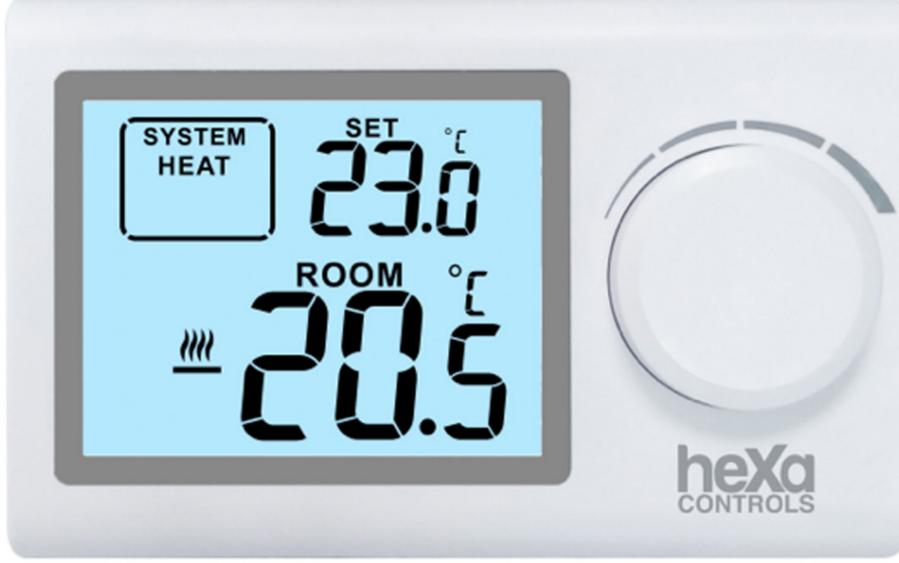

ÖZELLİKLER

- Kombi ve yerden ısıtma sistemleri için uygundur
- Haftalık program özelliği yoktur
- Oda ısı ölçüm aralığı : 0~40°C (0.1°C hassasiyet)
- Ayarlanabilir ısı aralığı : 5~35°C (0.5°C hassasiyet)
- Derece kalibrasyon ayarı : ±1°C @ 20°C
- Enerji beslemesi : 2 X AAA 1.5V Alkalın Pil
- Röle Çıkışı: 6(2)A (1380W), @230V AC
- Düşük pil uyarısı: Pil seviyesi 2.7V altına düştüğünde "🔋" simgesi ile gösterilir
- Beklemede Kullandığı Akım : 25uA
- Aydınlatma Kullanılan Akım : ≤5.5mA
- Ebatları : 120 x 77 x 28 mm


LDC EKTRAN

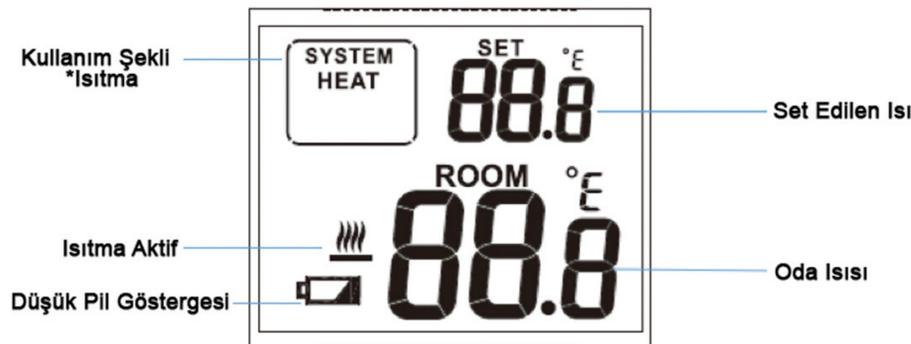


KULLANIM

- Ekran ışığı termostat üzerindeki ayar başlığı kullanılmaya başlandığı anda açılır ve kullanım bittikten 15sn sonra otomatik kapanır.
- Kontrol başlığını saat yönünde döndürdüğünüzde set edilen ısı değeri artacaktır ve kontrol başlığına basmanız ile ya da 5sn içerisinde otomatik olarak aktif hale gelecektir.
- Kontrol başlığını saat yönü tersine döndürdüğünüzde set edilen ısı değeri azalacaktır ve kontrol başlığına basmanız ile ya da 5sn içerisinde otomatik olarak aktif hale gelecektir.
- Oda termostatı üzerinden ayarlanan set değeri üzerine çıkması veya altına inmesi durumunda kombi veya yerden ısıtma sisteminizi açacaktır veya kapatacaktır.
- Bir çok marka kombi ile uygundur. Kombi montajlarında kombi servisinden destek almanızı öneririz.
- Elektrikli yerden ısıtma sistemlerinde maksimum çıkış 1380W'tır. Bu kapasite üzerindeki elektrikli ısıtıcılarda kullanılamaz.
- Termostat kontrol başlığına 5sn boyunca basılı tuttuğunuzda kontrol menüsüne ulaşabiliyorsunuz. Bu menü üzerinden Isıtma (Heating), Soğutma (Cooling) veya termostatı kapatma gibi fonksiyonları gerçekleştirebilirsiniz. Termostat üzerinde min. ısı limitlemesi bulunmaktadır. Eğer ortam ısı 7°C altına düşerse sistem otomatik olarak ısıtma modunda devreye girecektir.

BAĞLANTI

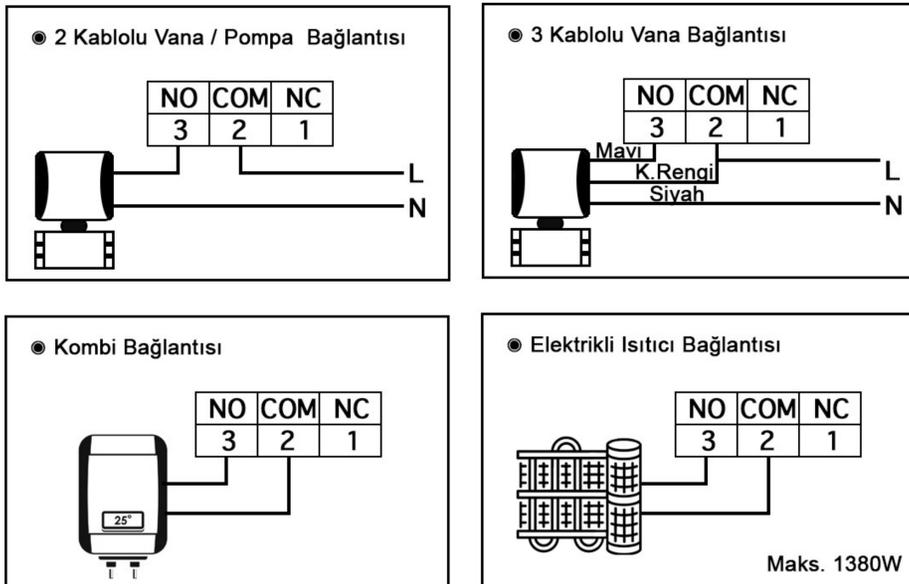

MONTAJ

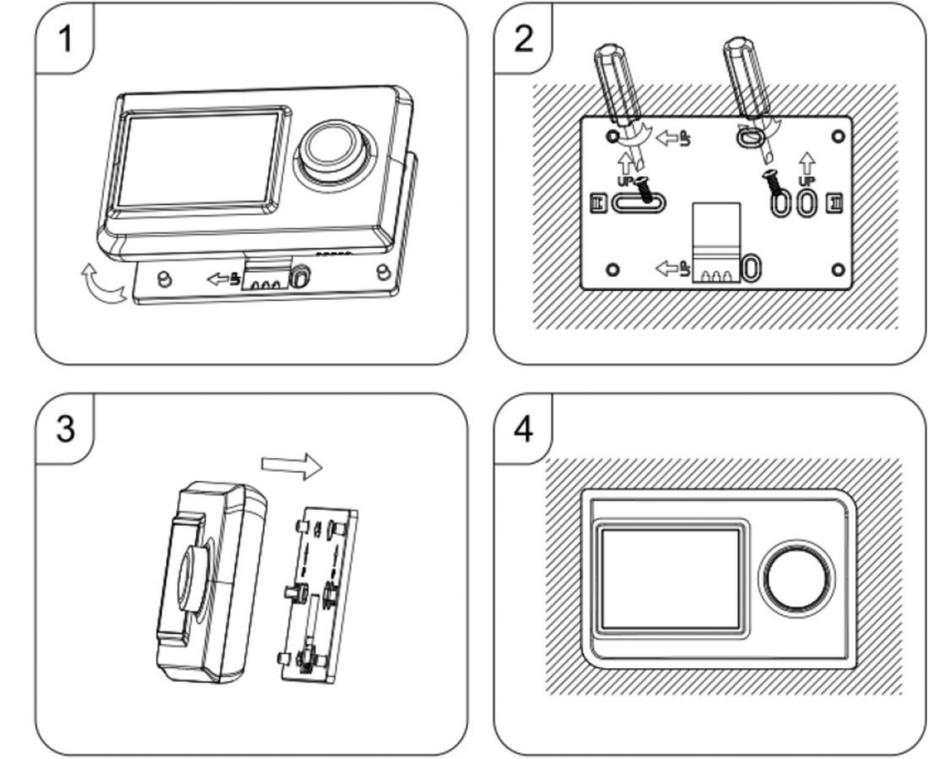

- Oda termostatı sıva üzerine monte edilebilen modeldir. Bağlantı şekillerinde uygun sisteme göre oda termostatı ile sistem arasında kablo çekilmesi gerekmektedir.
- Montajında öncelikle termostatın ön kapağı açılır. Arka kasası duvara monte edilir ve kablo bağlantıları yapıldıktan sonra pilleri de yerleştirilerek ön kapağı kapatılır.

GARANTİ BELGESİ

- Her türlü fabrika üretim hatalarına karşı fatura tarihi itibarı ile 24 ay ithalatçı firma garanti kapsamındadır.


İLETİŞİM BİLGİLERİ

- İthalatçı Firma
Kontrolyum Otomasyon Sistemleri San. Tic. Ltd. Şti.
Girne Mah. Irmaklar Sok. Küçükyalı İş Merkezi H Blok No:3 Maltepe / İstanbul
Tel: 0 (850) 441 0 596 | Faks: 0 (216) 504 15 71 | Whatsapp: 0 (530) 231 17 88
info@kontrolyum.com | www.kontrolyum.com



USER MANUAL


RT226-P1 ROOM THERMOSTAT

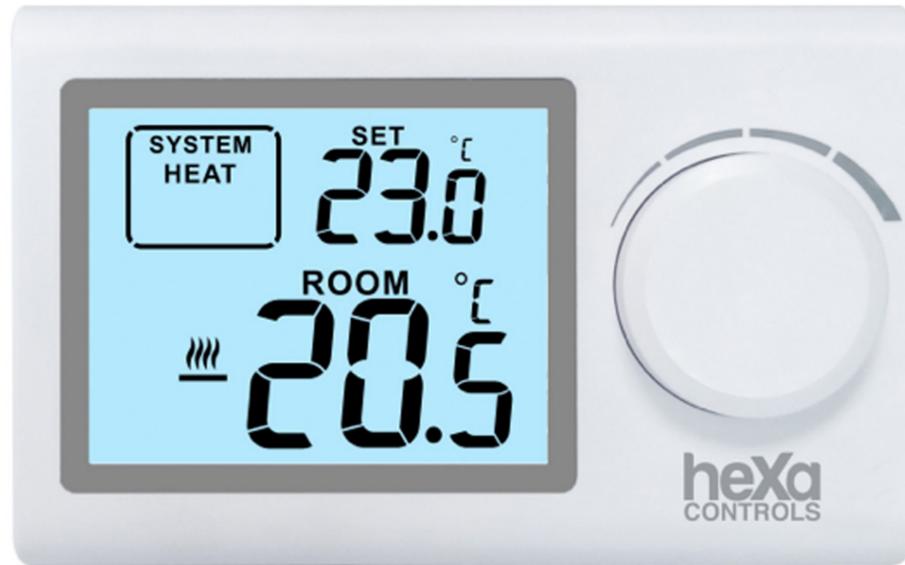

SETTINGS

- The backlight will be ON by turn the dial and OFF if no any operation for 15 seconds.
- Turn the dial in clockwise to increase the temperature, and then press the dial to confirm or wait for 5 seconds to automatically confirm.
- Turn the dial in anti-clockwise to reduce the temperature, and then press the dial to confirm or wait for 5 seconds to automatically confirm.
- It will turn on or off your boiler or underfloor heating system if it goes above or below the set point set via the room thermostat.
- The device must be installed and connected by a qualified professional. Always follow the manufacturer's instructions when connecting the thermostat to any heating or cooling appliance.
- The maximum output in electric floor heating systems is 1380W. It cannot be used in electric heaters above this capacity.
- Hold the dial button for 5 seconds to access the system running mode switch, then turn the dial to choose different mode between:
 - HEAT : adjust the temperature by turn the dial
 - COOL: adjust the temperature by turn the dial
 - OFF (Frost Protection): it will start heating when the room temperature is under 7°C
 Then press the dial again to confirm the running mode or wait for 10 seconds to confirm the setting automatically.

MOUNTING

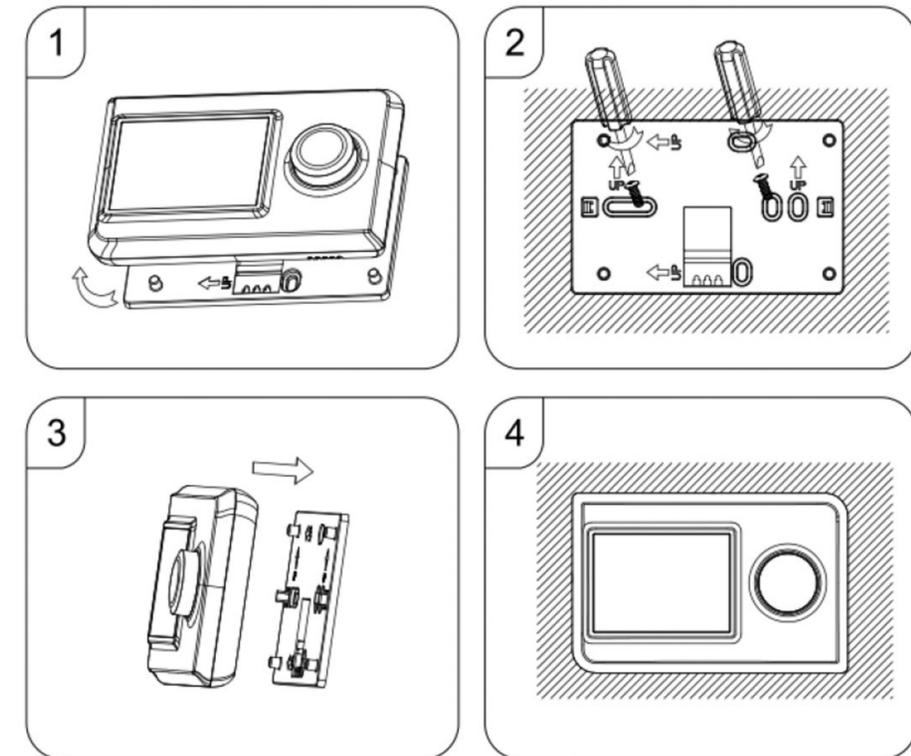

- Room thermostat is a model that can be mounted on wall. In connection types, cables should be drawn between the room thermostat and the system according to the appropriate system.
- In assembly, the front cover of the thermostat first opens. The back case is mounted on the wall and after the cable connections are made, the front cover is closed by placing the batteries at the end.

SPECIFICATIONS

- Boiler, heating and cooling systems
- Weekly non-programmable model
- Display Temperature Range: 0~40°C (0.1°C accuracy)
- Adjustable Temperature Range: 5~35°C (0.5°C acc.)
- Temperature measurement accuracy: ±1°C (at 20°C)
- Power source: TX: 2x AAA 1.5V Alkaline Battery
- Load Rating: 6(2)A (1380W), 230V
- Low Battery Indicator: Display "🔋" when battery is less than 2.7V
- Standby current: 25uA
- Lighting current ≤5.5mA
- Dimensions: 120 x 77 x 28 mm

WARRANTY


- Warranty period lasts 24 months right after invoice date for covering any defects in material or craftsmanship found.

CONTACT INFORMATION

● Exporter Company:
 Kontrolyum Otomasyon Sistemleri San. Tic. Ltd. Sti.
 Girne Mah. Irmaklar Sok. Kucukyali Is Merkezi H Blok No:3 Maltepe / İstanbul, Turkey
 Phone: +90 (850) 441 0 596 | Fax: +90 (216) 504 15 71 | Whatsapp: +90 (530) 231 17 88
 info@kontrolyum.com | www.kontrolyum.com



WIRING DIAGRAMS

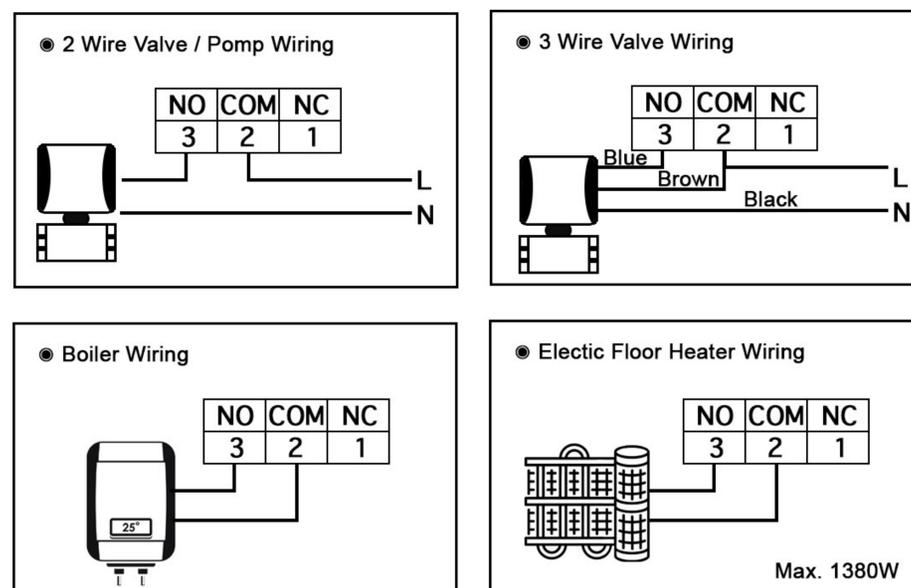

LDC SCREEN

