LP+ CO2 (LCD) (Temp_rH)

Room pendulum sensor for air quality

thermokon®
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 16.08.2022 • A122

Image similar

»APPLICATION

Room pendulum sensor for measuring the CO2 content in large rooms (open-plan offices, production halls, etc.). For direct connection to a DDC or a monitoring system, an analog 0..10 V output is available.

»TYPES AVAILABLE

Room pendulum sensor, optional with LCD CO2 + Temp – active 2x 0..10 V | 2x 4..20 mA | Relay
- LP+ CO2 (LCD) Temp VV
- LP+ CO2 (LCD) Temp AA
- LP+ CO2 (LCD) Temp VV Relay

Room pendulum sensor, optional with LCD CO2 + Temp + rH (opt.) – active 3x 0..10 V
- LP+ CO2 (LCD) Temp_rH 3xV

»SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.
Please comply with
- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

»PRODUCT TESTING AND CERTIFICATION

CE UKCA

Declaration of conformity
The declaration of conformity of the products can be found on our website https://www.thermokon.de/

»NOTES ON DISPOSAL

As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (±0,2 V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» INFORMATION ABOUT INDOOR AIR QUALITY CO_2

EN 13779 defines several classes for indoor air quality:

Category	CO_2 content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400.. 600 ppm	500 ppm	Standard indoor air quality
IDA3	600..1.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

» INFORMATION ABOUT SELF-CALIBRATION FEATURE CO_2

All gas sensors are subject to drift. The degree of drift is dependent on the use of components and product design. In addition, the following environmental conditions, among others, can accelerate/ favor the aging and wear of the sensors:

- Mechanical stress (also due to temperature fluctuation)
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (high humidity / condensation on measuring element)

An internal self calibration function with dual channel technology compensates the caused drift. Thermokon sensors are for permanent use (e.g. hospitals).

» APPLICATION NOTICE FOR HUMIDITY SENSORS

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy. A re-calibration may be required sooner than specified, or the sensor element may have to be exchanged when exposed to the following environmental conditions:

- Mechanical stress
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (e.g. condensation on measuring element)

Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

» TECHNICAL DATA

Measuring values	CO2, temperature + humidity (depending on the device)	
Output voltage	2..3x 0..10 V or 0..5 V, min. load 10 kΩ (live-zero configuration via Thermokon USEapp)	
Output Amp *(type-dependent)*	**AA** 2x 4..20 mA, max. load 500 Ω	
Power supply *(type-dependent)*	**VV | 3xV | Relay** 15..35 V = or 19..29 V ~ SELV	**AA** 15..35 V = SELV
Power consumption	max. 2,5 W (24 V =) | 4,3 VA (24 V ~)	
Measuring range temp *(type-dependend)*	**VV | 3xV** 0..+50 °C (default setting), configurable via Thermokon USEapp	
Measuring range humidity *(type-dependend)*	**3xV** 0..100% rH non-condensing, optionally configurable via Thermokon USEapp (enthalpy, absolute humidity, dew point)	
Measuring range CO2	0..2000 ppm (default setting), 0..5000 ppm (optionally configurable via Thermokon USEapp)	
Accuracy Temperature	±0,5 K (typ. at 21 °C)	
Accuracy Humidity *(type-dependend)*	**3xV** ±2% between 10..90% rH (typ. at 21 °C)	
Accuracy CO2	±50 ppm +3% of value (typ. at 21 °C, 50% rH)	
Calibration	self-calibration, Dual Channel	
Sensor	NDIR (non-dispersiv, infrared), sensor wire 5 m, for other lengths please request	
Display *(optional)*	LCD 29x35 mm with RGB backlight	
Enclosure *(type-dependent)*	enclosure USE-M, PC, pure white, with removable cable entry	**with LCD (optional)** cover PC, transparent
Protection	IP65 according to EN 60529	
Cable entry *(type-dependent)*	**VV | AA | 3xV** Flextherm M20, for wire Ø=4,5..9 mm, removable	**Relay** M25 with fourfold cable entry for wire with max. Ø=7 mm, removable
Connection electrical	removable plug-in terminal, max. 2,5 mm²	
Ambient condition	0..+50 °C, max. 85% rH short term condensation	
Mounting	installation is also possible using mounting base	

» CONFIGURATION

The Thermokon bluetooth dongle with micro-USB (Item No.: 668262) is required for communication between USEapp and USE-M / USE L products. Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.
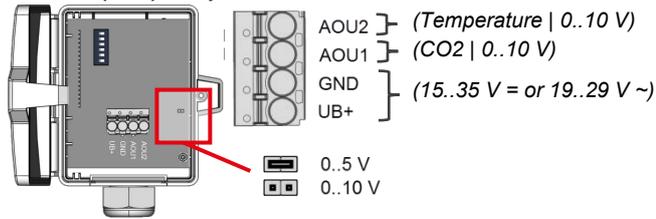
The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.
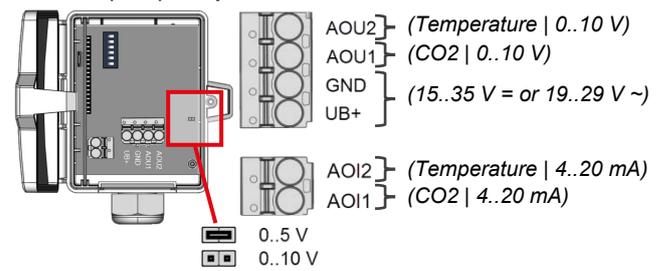
» APPLICATION NOTICE

The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.
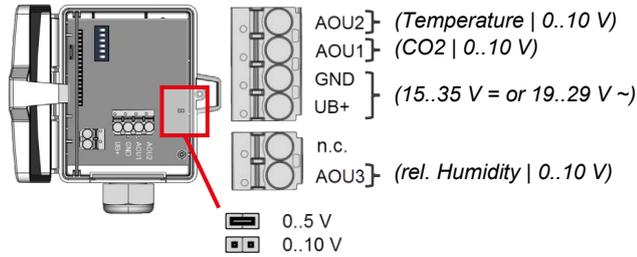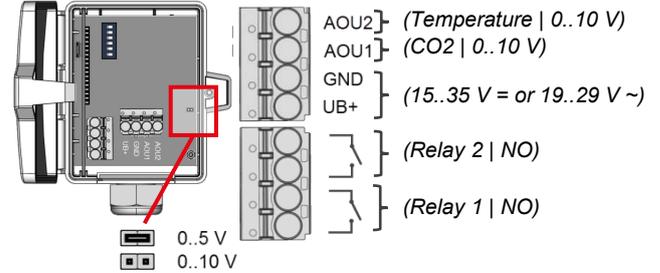
»CONNECTION PLAN

LP+ CO2 (LCD) Temp VV

AOU2 ─┐ *(Temperature | 0..10 V)*
AOU1 ─┘ *(CO2 | 0..10 V)*
GND ─┐
UB+ ─┘ *(15..35 V = or 19..29 V ~)*

▭ 0..5 V
▭▭ 0..10 V

LP+ CO2 (LCD) Temp AA

AOU2 ─┐ *(Temperature | 0..10 V)*
AOU1 ─┘ *(CO2 | 0..10 V)*
GND ─┐
UB+ ─┘ *(15..35 V = or 19..29 V ~)*

AOI2 ─┐ *(Temperature | 4..20 mA)*
AOI1 ─┘ *(CO2 | 4..20 mA)*

▭ 0..5 V
▭▭ 0..10 V

LP+ CO2 (LCD) Temp_rH 3xV

AOU2 ─┐ *(Temperature | 0..10 V)*
AOU1 ─┘ *(CO2 | 0..10 V)*
GND ─┐
UB+ ─┘ *(15..35 V = or 19..29 V ~)*

n.c. ─┐
AOU3 ─┘ *(rel. Humidity | 0..10 V)*

▭ 0..5 V
▭▭ 0..10 V

LP+ CO2 (LCD) Temp Relais 2xV

AOU2 ─┐ *(Temperature | 0..10 V)*
AOU1 ─┘ *(CO2 | 0..10 V)*
GND ─┐
UB+ ─┘ *(15..35 V = or 19..29 V ~)*

─┐ *(Relay 2 | NO)*
─┘

─┐ *(Relay 1 | NO)*
─┘

▭ 0..5 V
▭▭ 0..10 V

»DIP SWITCH SETTINGS, MAINBOARD

CO2 range – DIP 1		DIP 2 | 3	temperatur range – DIP 4 | 5 [SI / IMP]				Measurand – DIP 6	
OFF	ON	reserviert	**OFF OFF**	ON OFF	OFF ON	ON ON	OFF	ON
ON ▮ 1	ON ▯ 1	ON ▮▮ 2 3	ON ▯▯ 4 5	ON ▮▯ 4 5	ON ▯▮ 4 5	ON ▮▮ 4 5	ON ▮ 6	ON ▯ 6
			0..+50	-20..+80	-40..+60	-15..+35 °C	SI	IMP
0..2000 ppm	0..5000 ppm		**+40..+140**	0..+200	-40..+160	0..+100 °F		

»DIMENSIONS (MM)

»ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base   Item No. 631228
Mounting kit universal   Item No. 698511
• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)