

Flow sensor

Type

Calibrated ultrasonic flow sensor, temperature and glycol compensated. With DC 0.5...10 V output signal. This sensor can be used in closed cold and warm water systems and is robust against dirt and magnetite. There is also a low pressure drop across the sensor.

Technical data sheet







rview							
Туре	DN	Rp ["]	Δp [kPa]	FS [l/s]	PN	Voltage output	
FM015R-SZ	15 1/2		13	0.42	16	0.510 V	
FM020R-SZ	20	3/4	13	0.78	16	0.510 V	
FM025R-SZ	25	1	9	1.38	16	0.510 V	
FM032R-SZ	32	1 1/4	7	2.16	16	0.510 V	
FM040R-SZ	40	1 1/2	7	3.00	16	0.510 V	
FM050R-S7	50	2	16	5.76	16	0.510 V	

FS: Full scale, maximum measurable flow

 $\Delta p \text{:} \ \text{Pressure drop at FS}$

Technical Data		
Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption AC	1 VA
	Power consumption DC	0.5 W
	Connection supply	Cable , 3 x 0.75 mm ²
Functional data	Application	Water
	Voltage output	0.510 V
	Voltage output note	0 V = Missing power supply
		0.3 V = Sensor error
		0.5 V = 0% of FS
		10 V = 100% of FS
		max. load 1 mA
	Pipe connection	Internal thread according to ISO 7-1
		External thread according to ISO 228-1
	Installation position	upright to horizontal
	Servicing	maintenance-free
Measuring data	Measuring values	Volumetric flow
	Measuring fluid	Water and water glycol mixtures
	Measuring principle	Ultrasonic volumetric flow measurement
	Measuring accuracy flow	$\pm 2\%$ of the measured value (20100% FS) @ 20°C /
		Glycol 0% vol.
		±0.4% of FS (020% FS) @ 20°C / Glycol 0% vol.
	Measuring accuracy flow note	±6% of the measured value (20100% FS)
		±1.2% of FS (020% FS)
	Flow Measurement Repeatability	±0.5%
	Min. flow measurement	1% of FS

Technical data sheet FM..R-SZ

Materials	Fluid wetted parts	Brass nickel-plated

Flow measuring pipe Brass body nickel-plated

Safety data

3111	,
Ambient humidity	Max. 95% r.H., non-condensing
Fluid temperature	-20120°C [-5250°F]
Storage temperature	-4080°C
Protection class IEC/EN	III Safety Extra-Low Voltage (SELV)
Protection class UL	UL Class 2 Supply
Certification IEC/EN	IEC/EN 60730-1:11 and IEC/EN 60730-2-15:10
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Quality Standard	ISO 9001
Mode of operation	Type 1
Control pollution degree	3
Rated impulse voltage supply	0.8 kV

Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

Outdoor applications: Only possible where (sea) water, snow, ice, sunlight or aggressive gases cannot interfere directly with the device and it can be guaranteed that the ambient conditions remain at all times within the thresholds according to the data sheet.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product Features

Mode of operation

The ultrasonic flow sensor is equipped with a flow pipe, two flow transmitters and an electronic circuit. A temperature sensor is mounted in the flow pipe to compensate the temperature effects.

A sensor error occurs when the ultrasonic path is interrupted (air bubbles in the system, connection to ultrasonic transducers interrupted).


Patented glycol compensation

Glycol changes the viscosity of the heat transfer fluid and as a result affects the measured volumetric flow. Without glycol compensation, volumetric flow measurements can show errors of as much as 30 percent. The patented automatic glycol compensation significantly reduces the degree of measurement error.

Installation notes

Recommended installation positions

The sensor can be installed upright to horizontal. The sensor may not be installed in a hanging position.

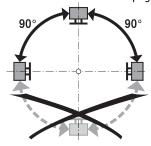


Installation in return

Installation in the return is recommended.



Inlet section

In order to achieve the specified measuring accuracy, a flow-calming section or inflow section in the direction of the flow is to be provided upstream from the flow sensor. Its dimensions should be at least 5x DN.

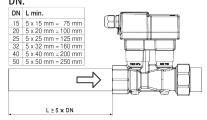

Water quality requirements

The water quality requirements specified in VDI 2035 must be adhered to.

Servicing

Sensors are maintenance-free.

Before any service work on the sensor is carried out, it is essential to isolate the sensor from the power supply (by unplugging the electrical cables if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).


The system must not be returned to service until the sensor has been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

Flow direction


The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the flow rate will be measured incorrectly.

Wiring diagram

AC/DC 24 V, Output signal



Dimensions

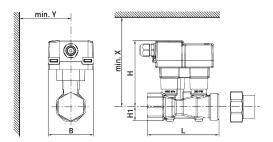

Туре	DN	Rp ["]	L [mm]	B [mm]	H [mm]	H1 [mm]	X [mm]	Y [mm]	Weight
FM015R-SZ	15	1/2	108	75	110	18	195	77	0.88 kg
FM020R-SZ	20	3/4	117	75	112	20	195	77	1 kg
FM025R-SZ	25	1	123	75	115	22	197	77	1.2 kg
FM032R-SZ	32	1 1/4	127	75	118	26	201	77	1.4 kg
FM040R-SZ	40	1 1/2	130	75	122	30	211	77	1.4 kg
FM050R-SZ	50	2	136	75	127	35	212	77	2.1 kg