STR100 - STR107



Wall Modules

The STR is a series of wall modules optimized for public facilities such as office buildings, hotels, hospitals, schools and shopping malls. Their pleasant appearance and well-designed interface make them suitable for any contemporary building. They are easy to operate and install.

The STR101 through STR107 are equipped with a modular jack (RJ-10) that allows the wall module to be connected to the portable TAC Xenta OP (Operator Panel). The STR101 through STR107 can be used together with the TAC Xenta 100, 200, 300 and 400 series of controllers.

The wall modules are equipped differently; the STR100 is the basic model, while the STR106 and STR107 are fully equipped. The STR wall modules replace the ZS 100 series and the EGRL room sensor.

SPECIFICATIONS

SPECIFICATIONS
Part Numbers See table on page 2
Ambient Conditions
Storage temperature –20 °C to +70 °C
$(-4 ^{\circ}\text{F to} + 158 ^{\circ}\text{F})$
Operation temperature ±0 °C to +50 °C
(+32 °F to +122 °F)
Humidity max. 90%
non-condensing relative humidity
Mechanical
Enclosure material
Enclosure rating IP 20/NEMA 1
Dimensions see Fig. 1
Weight
Agency Compliances
Emission
CE
Immunity
CE
Safety
CE EN 61010-1 UL
Flammability
UL UL 94 V-0
Energy (STR106-3 only)
eu.bac, certificate no. 020711 EN 15500
Sensor Data
Type 1.8 k Ω thermistor
Accuracy at 15–30 °C (59–86 °F),

±0.35 °C (0.63 °F)

DIMENSIONS mm (in) 84 (3.3) 82 (3.2) (87) 91 (99) 91 Fig 1



PART NUMBER

Part	Model	Temp.	Mode	Setpoint	Bypass	Fan Speed
Number	Number	Sensor	Indicator	Offset	Button	Control ¹
				Wheel		
004600100	STR100	X	_	_	_	_
004600110	STR100-W	X	_	_	_	_
004600200	STR101	X	X	_	_	_
004600300	STR102	X	X	X	_	_
004600700	STR103	X	X	_	X	_
004600400	STR104	X	X	X	X	_
004600500	STR106	X	X	X ²	X ³	X ⁴
004600800	STR106-B	X	X	X ²	X ³	X ⁴
004600900	STR106-3	X	X	X ²	X ³	X ⁴
004600600	STR107	X	X	X	X	X ⁵

FUNCTIONS

Fig.2 shows an STR106.

Mode Indicator

A green LED is used on the STR101–STR107 to indicate the mode in accordance with the following:

- Comfort mode (On) is indicated by a steady green light.
- Economy mode (Standby) is indicated by a flashing green light.
- Unoccupied mode is indicated by the LED being off.

Bypass Button

A bypass button is provided on models STR103–STR107 to change from standby (economy) or unoccupied mode to comfort mode. When entering comfort mode, the symbol on the display shows a steady light. When the bypass time expires, the symbol returns to its previous status again, provided that the feedback mode is connected. Otherwise the symbol returns to the Off status after two hours.

Setpoint Offset Wheel

A setpoint offset wheel is provided on models STR103, STR104, STR106 and STR107 for adjusting the temperature setpoint offset.

The adjustment range may be set to the following limits (not applicable to STR106-3):

- ±1 °C (±1.8 °F)
- ±2 °C (±3.6 °F)
- ±3 °C (±5.4 °F)
- ±4 °C (±7.2 °F)
- ±5 °C (±9.0 °F)

The adjustment is done manually using the plastic keys on the back of the core-panel. Increase/decrease limits are separately adjustable.

- 1. In the Xenta 100 series, this is only applicable for the TAC Xenta 101-VF and TAC Xenta 121-FC.
- 2. STR106-3 with a fixed range: +1-3 °C (centigrades only).
- 3. STR106-B has no icon on the Bypass button.
- 4. All three models use a 5-positions control wheel: A-0-I-II-III.
- 5. STR107 uses a 3-positions control wheel: Auto-Off-On.

Wiring

The STR100–STR107 uses 2–10 wires for installation. The wiring is easily accessible thanks to the plug-in concept.

Cables

Twisted pair, unshielded. Min. cross-sectional area: 0.7 mm² (AWG-19). Max. distance: 30 m (100 ft).

Mounting

The units can be mounted directly onto the wall or fitted onto a wide variety of back-boxes. The plug-in concept makes wiring quick and easy.

Maintenance


No maintenance is required for the wall module. If necessary, the wall module may be cleaned with a soft cloth.

STR106-3

STR106-3, connected to the controller TAC Xenta 121-FC/230, forms a system which is certified according to the eu.bac regulation EN 15500.

For more information, see www.eubaccert.eu

STR106

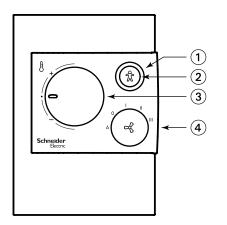

- 1. Mode indicator, On/Off.
- 2. Bypass button.
- 3. Setpoint offset wheel.
- 4. Fan speed control wheel.

Fig 2