## MDB24-44-54

#### 

MODEL	CONTROL	POWER SUPPLY	DESCRIPTION	TORQUE
MDB24	On/Off or Floating	85-265 Vac	Actuator for dampers and shoe valves	10 Nm
MDB44	On/Off or Floating	04\/e=/ele		
MDB54	Proportional 2-10 Vdc	24 Vac/dc		
MDB24M		85-265 Vac	Actuator for dampers and shoe valves with	
MDB44M	On/Off or Floating	24 Vac/dc	auxiliary microswitches	



#### **APPLICATION AND USE**

MDB24/44/54 are actuators for dampers and shoe valves for operating air control dampers in ventilation and air-conditioning systems in building services installations for air control dampers up to approx.  $2\ m^2$ 

#### TECHNICAL CHARACTERISTICS

Control On/Off or Floating (MDB24/24M/44/44M)

Proportional (MDB54)

Damper shaft $\Diamond$  8...15 mm /  $\emptyset$  8...20 mmPower supply85-265 Vac (MDB24/24M)

24 Vac/dc (MDB44/44M/MDB54)

**Consumption** 2W / 4,5VA (MDB24/24M) 2W / 3,5 VA (MDB44/44M/54)

211 / 3,3 171 (1110044) 44101/34

Connection cable Supplied 1000 mm cable

3 x 0,75 mm<sup>2</sup> (MDB24/24M/44/44M)

4 x 0,75 mm<sup>2</sup> (MDB54)

**Torque** 10 Nm with nominal voltage

**Stroke** < 150 s /90°

**Auxiliary switch** n° 1 adjustable from the outside

(MDB24M/44M)

**Auxiliary internal** 250 Vac / 5 (2,5)A, 1 x SPDT(Ag)

power supply (MDB24M/44M) supplied connection cable

1000 mm / 3 x 0,75 mm<sup>2</sup>

Protection degree IP54 (downwards cable)

Maintenance Free

**Temperature** operating -30T50 °C storage -30T80 °C

**Ambient humidity** 5...95% r.H. (not condensing)

MDB54 only

Control signal Y 0...10 Vdc or 2...10 Vdc (standard)

Control signal U 2...10 Vdc

Directive compliance	MDB24/24M/44/44M	MDB54	
EMC	CE (2004/108/EU)	CE (2014/30/EU)	
LVD	CE (2006/95/EU)	CE (2014/35/EU)	
RoHS	CE (2011/65/EU)		
Operation mode	Typ 1 (EN60730-1)		
Nominal pulse voltage	4 Kv (EN60730-1)	0,8 Kv (EN60730-1)	
Pollution	3 (EN60730-1)		


#### **ACCESSORIES**

AM72 Linkage with M3-M4 valves

#### **INSTALLATION AND MOUNTING**

For actuation and control of dampers in ventilation and air-conditioning applications, the actuators should be mounted in dry environment, absolutely free from acrid fumes. In case of outdoor installation, the actuator has to be protected against climatic influences.

#### **WIRING DIAGRAMS**

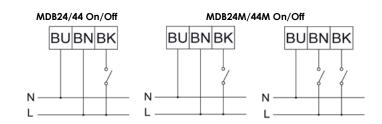



Tel. 010 73 06 1 Fax. 010 73 06 870/871 www.controlli.eu

The device contains electrical and electronic components and is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.






1st Issue rev. d 11/2019 DBL371e Page 1

# MDB24/44 Floating BUBNBK S1 2 1 3 Auxiliary switch

#### MDB54

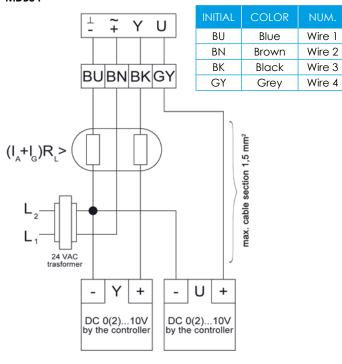

For MDB24x, MDB44x models use a cable with a section of at least 1.5  $\mbox{mm}^2.$ 

#### **OPERATION**

#### Adjustment of the rotation angle (Fig. 1)


Both end stops are adjusted to 0 (0°) and 1 (90°). For smaller rotation angles, loosen the screws at the metal end stop, adjust the end stops as requested, and fasten the screws again.

#### Damper shaft locking (Fig. 1)

It is carried out through the clamp for the dimensions:

 $\Diamond$  8...12 mm and Ø 8...15 mm.


For diameters  $\lozenge$  13...15 mm and  $\varnothing$  16...20 mm remove the clamp reduction.

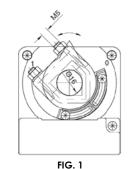



#### Rotation direction setting (Fig. 2)

The actuator is adjusted to clockwise direction by the factory to "R". For changing the direction of rotation, turn the adjusting knob to "L".

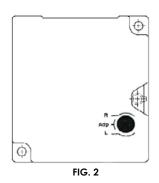


#### Aux. microswitch setting (Fig. 3)

The scale at the adjusting knob corresponds to a percentage graduation, related to 0°...90°.

End stop is set to "0": Switch off the motor and choose the requested switching position by turning the knob to the right, i.e. ".2" = 20%.

End stop is set to "1": Switch off the motor rand choose the requested switching position by turning the knob to the left, i.e. ".8" = 20%.

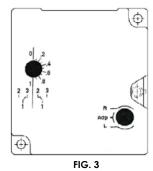

#### MDB54 setting

Mode switch with five positions at the housing:


- 1. Rotary direction right 2-10 Vdc
- 2. Rotary direction right 0-10Vdc
- 3. Adaption
- 4. Rotary direction left 0-10 Vdc
- 5. Rotary direction left 2-10 Vdc

### 2-10 R 0-10 R Adp-( 0-10 L 2-10 L

#### Adaption drive

- Actuator power off
- Setting the mechanical end stops
- Actuator power on
- Adaption to enable
- Actuator drive to position 0
- Actuator drive to position 1
- Adaption to disable if desired reached angular range or drive to endstop
- "Y" refers to the measured angular range

#### **DIMENSIONS [mm]**

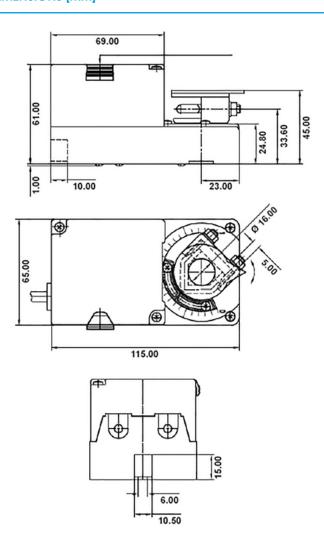

The performances stated in this sheet can be modified without any prior notice

