» LDF+

Ceiling sensor light



Datasheet

Subject to technical alteration Issue date: 08/14/2020 • A110





» APPLICATION

The brightness sensor for ceiling installations detects indoor and outdoor light levels in living rooms, offices or at workplaces depending on the type of prism. The sensor is adapted to the spectral sensitivity of the human eye and serves together with control systems for an on-demand light or sun protection control. The remote sensor is connected to the enclosure via conventional RJ45 cables, making it easy to install in hardly accessible places. If two sensors are used, the individual values, the mean, minimum or maximum value can be provided through both output signals (configurable via Thermokon USEapp). Together with the relay option, two 2-point controllers or a 2-stage controller can be realized.

»TYPES AVAILABLE

Ceiling sensor light - active 0..10 V | 4..20 mA | Relay

LDF+ V L1500 straight prism

LDF+ V L1500 diagonal prism

LDF+ A L1500 straight prism

LDF+ A L1500 diagonal prism

LDF+ V L1500 straight prism Relay

LDF+ V L1500 diagonal prism Relay

Dual ceiling sensor light - active 2x 0..10 V | 2x 4..20 mA | Relay

LDF+ Dual VV 2xL1500 straight prism

LDF+ Dual VV 2xL1500 diagonal prism

LDF+ Dual AA 2xL1500 straight prism

LDF+ Dual AA 2xL1500 diagonal prism

LDF+ Dual VV 2xL1500 straight prism Relay

LDF+ Dual VV 2xL1500 diagonal prism Relay

Page 2 / 6 Issue Date: 14.08.2020

» SECURITY ADVICE - CAUTION



The installation and assembly of the device should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorized modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» CONFIGURATION



The Thermokon bluetooth dongle with micro-USB is required for communication between USEapp and USE-M / USE L (Item No.: 668262). Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be performed using the Thermokon USEapp. The configuration can be performed only when the device is powered.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

» APPLICATION NOTICE



The housing cover must be completely closed in order to ensure the accuracy and reproducibility of the measured values during a test or service log via USEapp.

The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.

» MOUNTING ADVICES

The ceiling flush mounted sensor is installed in a 26 mm diameter hole.

It is important to mount the light sensor in a suitable position for daylight regulation.

It should be positioned where an average daylight level will be reached. (center of the room or in the vicinity of the light control to be measured). The sensor should not be positioned too close to window surfaces or too far in the room. Ideally, the sensor should be positioned over the measuring surface, such as the work surface of a desk. In contrast to the straight prism, the version with oblique prism can be individually positioned in the room. The measurement area should preferably have a medium reflectance. Reflecting objects such as glass or polished metal surfaces should not be present. The influence of extraneous light sources, eg lights, windows, skylights must be excluded or reduced as much as possible

Issue Date: 14.08.2020 Page 3 / 6

»TECHNICAL DATA

Measuring values	light	
Output voltage	$1x/2x$ 010 V or 05 V (adjustable via jumper; live-zero configuration via Thermokon USEapp), min. load 10 k Ω	
Output ampere (type-dependent)	A AA 1x/2x 420 mA, max. load 500 Ω	
Output switch contact (type-dependent)	Relay 2x floating contact NO for 24 V ~ or 24 V = / 3 A, (optional)	
Power supply	1535 V = or 1929 V ~ SELV	
Power consumption	typ. 0,6 W (24 V =) 1,5 VA (24 V ~)	
Measuring range light	0200 Lux 01000 Lux (default) 02 kLux 010 kLux 020 kLux 050 kLux, selectable at the device	
Accuracy light	±5% of measuring range	
Sensor	Ambient light sensor with precise optical filtering similar to the human eye	
Prism (optional)	acrylic glass clear, straight	acrylic glass clear, diagonal
Enclosure	enclosure USE-M, PC, pure white	
Protection	IP65 according to EN 60529	
Cable entry	V(V) A(A) Flextherm M20, for wire max. Ø=0.180.35 in., removable	Relay M25 with fourfold cable entry for wire with max. Ø=0.28 in., removable
Connection electrical	removable plug-in terminal, max. 14 AWG, sensor wire length= 4.9 ft. (1,5 m) (default), max. 33 ft. (10 m), plug RJ45	
Ambient condition	-22+158 °F, max. 85% rH short term condensation	

» PRODUCT TESTING AND CERTIFICATION




Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/.

» CONNECTION PLAN


LDF+ V | optional LDF+ Dual VV

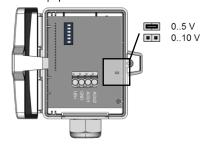



(light 2 | 0..10 V) optional, if sensor 2 connected (light 1 | 0..10 V) (15..35 V = or 19..29 V ~)

LDF+ A | optional LDF+ Dual AA

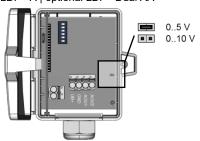




(light 2 | 0..10 V) optional, if sensor 2 connected (light 1 | 0..10 V) (15..35 V =)




(light 2 | 4..20 mA) optional, if sensor 2 connected (light 1 | 4..20 mA)

Page 4 / 6 Issue Date: 14.08.2020


LDF+ V Relais | optional LDF+ Dual VV Relais

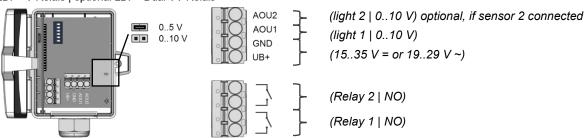



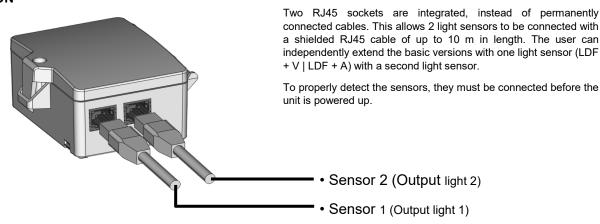


» DIP SWITCH CONFIGURATION

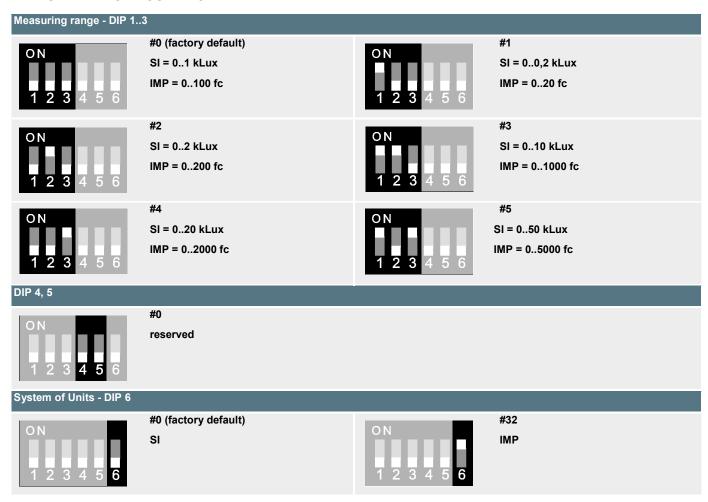

Issue Date: 14.08.2020 Page 5 / 6

» ANGLE-DEPENDENT SENSITIVITY


Sensitivity straight prism

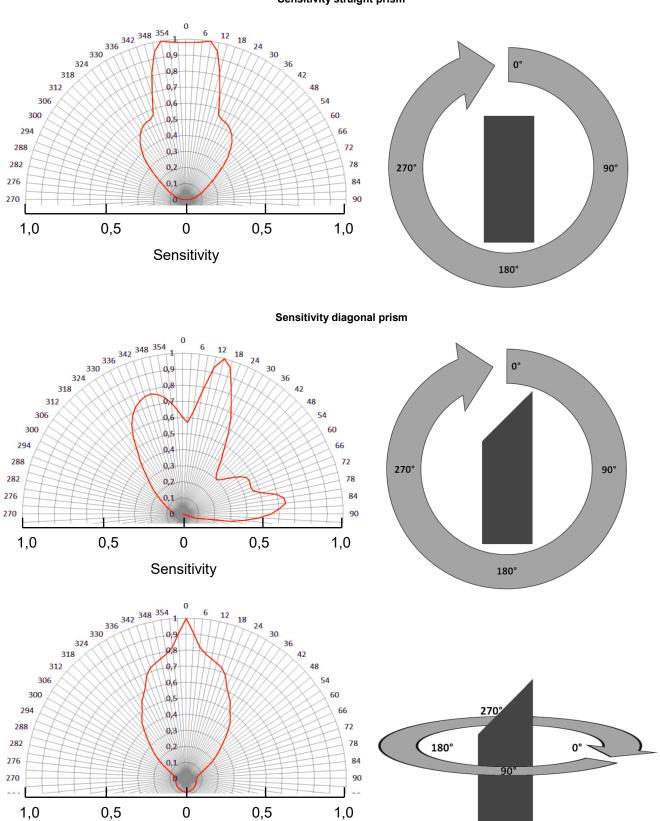

Sensitivity

Page 6 / 6 Issue Date: 14.08.2020


» SPECTRAL SENSITIVITY

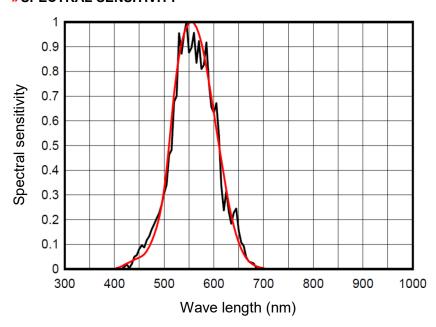



The adjacent graph shows the sensitivity curve of the human eye - also known as the V-lambda curve - and the spectral sensitivity of an LDF + sensor. The human eye perceives radiation of about 400 to 700nm as light. At about 555nm, the eye is most sensitive.

» DIMENSIONS (IN.)

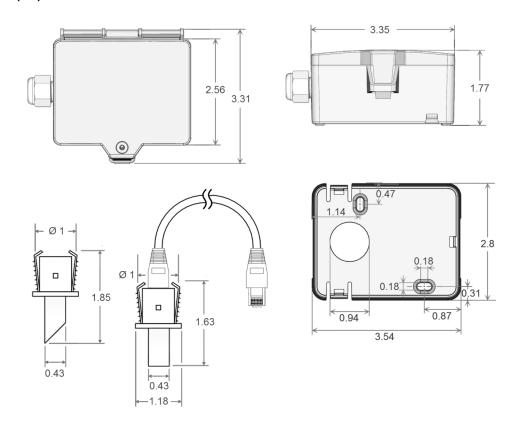

» ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base Mounting kit universal

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

Item No. 631228 Item No. 698511

» ACCESSORIES (OPTIONAL)

Bluetooth dongle Cable entry M25 USE white, sealing insert $4x \varnothing = 0.28$ in. (4 pcs)

Item No. 668262 Item No. 641364