

## 22ADP-18Q..

Differential pressure sensor Air

Differential pressure transmitter with 8 selectable ranges and outputs 0...5 V, 0...10 V or 4...20 mA. For monitoring the differential pressure of air and other non-flammable and non-aggressive gases. Typical application in HVAC systems for monitoring air filters, fans V-belts as well as the use in pressure differential systems. Options available with LCD display, auto-zero feature. IP65 / NEMA 4X rated enclosure.





#### **Type Overview**

Туре	Measuring range pressure [Pa]	Output signal active pressure	Burst pressure	Display type	Additional features
22ADP-18Q	-150250	05 V, 010 V, 420 mA	40 kPa	-	-
22ADP-18QA	-150250	05 V, 010 V, 420 mA	40 kPa	-	Auto-Zero
22ADP-18QB	-150250	05 V, 010 V, 420 mA	40 kPa	LCD	Auto-Zero
22ADP-18QL	-150250	05 V, 010 V, 420 mA	40 kPa	LCD	-

#### **Technical Data**



22ADP-18Q..


Electrical data	Nominal voltage	AC/DC 24	١V			
	Nominal voltage range	AC 192	AC 1929 V / DC 1535 V			
	Power consumption AC	1.7 VA				
	Power consumption DC	1.1 W				
	Electrical connection	Pluggabl mm²	Pluggable spring loaded terminal block max. 2.5			
			land with strain relief Ø68 mm			
Functional data	Sensor Technology	Piezo measuring element				
	Multirange	8 measur	8 measuring ranges selectable			
	Voltage output	1x 05 V	1x 05 V, 010 V, min. load 10 kΩ			
	Current output	1x 420 mA, max. load 500 Ω				
	Output signal active note	Output 05/10 V selectable with switch				
	Display	LCD, 29x3	LCD, 29x35 mm			
			with backlight			
			Measured values: Pa, inchWC (parametrisable)			
	Application		Air			
	Response time	Adjustab	le 0.8 s or 4.0 s			
Measuring data	Measuring values		Differential pressure			
	Measuring fluid		Air and non-aggressive gases			
	Measuring range settings pressure	Setting	range [Pa]	range [inch WC]	Factory setting	
		SO	0250	01	$\checkmark$	
		S1 S2	0100 050	00.4 00.2		
		52 S3	025	00.1		
		S4	-2525	-0.10.1		
		S5	-5050	-0.20.2		
		S6	-100100	-0.40.4		
		S7	-150150	-0.60.6		
	Accuracy pressure	deviation compared to the reference device ±1 Pa at range <250 Pa				
	Long-term stability	±2.5% FS	±2.5% FSO (Full Scale Output) / 4 yr.			
Materials	Cable gland	PA6, blac	k			
	Housing		Cover: Lexan, orange			
			Bottom: Lexan, orange			
			Seal: 0467 NBR70, black UV resistant			
Safety data	Ambient humidity	Max. 95%	6 r.H., non-cond	densing		
	nbient temperature -1050°C [15120°F]					
	id temperature -1050°C [15120°F]					
	Protection class IEC/EN	III Safety	III Safety Extra-Low Voltage (SELV)			
	Protection class UL	on class UL UL Class 2 Supply				
	EU Conformity CE Marking					
	Certification IEC/EN IEC/EN 60730-			/EN 60730-2-6		
	Certification UL	cULus acc. to UL60730-1A/-2-6, CAN/CSA E60730-1:02				
	Degree of protection IEC/EN	IP65				
	Degree of protection NEMA/UL	NEMA 4X				
	Quality Standard	ISO 9001				
		130 3001				

# Safety notes




Ĺ	This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment. Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation. The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.		
Remarks			
Automated Zero-Point calibration (Auto Zero)	Transmitters equipped with the auto-zero calibration are maintenance-free.		
	The auto-zero calibration electronically adjusts the transmitter zero every 10 min eliminates all output signal drift due to thermal, electronic or mechanical effects. adjustment takes approx. 4 seconds after which the device returns to its normal the 4 second adjustment period, the output and display values will freeze to the l	. The auto-zero measuring mode. During	
Manual Zero-Point calibration	In normal operation zero-point calibration should be executed every 12 months.		
	Attention! For executing zero-point calibration the power supply must be connected one hour before.		
	• Release both connection tubes from the pressure terminals + and -		
	Press the button until the LED lights permanently		
	<ul> <li>Press the button until the LED lights permanently</li> <li>Wait until the LED flashes again and reinstall the connection tubes to the press</li> </ul>	ure ports (note + and -)	
Scope of delivery		ure ports (note + and -)	
Scope of delivery Scope of delivery		ure ports (note + and -) <b>Type</b>	
	• Wait until the LED flashes again and reinstall the connection tubes to the press		
	Wait until the LED flashes again and reinstall the connection tubes to the pressu     Description     Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP     Mounting plate L housing     Dowel	<b>Type</b> A-22AP-A08	
Scope of delivery	Wait until the LED flashes again and reinstall the connection tubes to the pressu     Description     Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP     Mounting plate L housing     Dowel	Туре А-22АР-А08	
Scope of delivery Accessories	Wait until the LED flashes again and reinstall the connection tubes to the pressu      Description      Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP Mounting plate L housing      Dowel Screws      Description      Duct connector, Metal, L 40 mm, Tube connection 5 mm	<b>Type</b> A-22AP-A08 A-22D-A10	
Scope of delivery Accessories	Wait until the LED flashes again and reinstall the connection tubes to the pressu      Description      Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP Mounting plate L housing      Dowel Screws      Description      Duct connector, Metal, L 40 mm, Tube connection 5 mm      Duct connector, Metal, L 100 mm, Tube connection 5 mm	Type           A-22AP-A08           A-22D-A10           Type           A-22AP-A02           A-22AP-A04	
Scope of delivery Accessories	Wait until the LED flashes again and reinstall the connection tubes to the pressu      Description      Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP Mounting plate L housing      Dowel Screws      Description      Duct connector, Metal, L 40 mm, Tube connection 5 mm	Type           A-22AP-A08           A-22D-A10           Type           A-22AP-A02	
Scope of delivery Accessories	Wait until the LED flashes again and reinstall the connection tubes to the pressu      Description      Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP Mounting plate L housing      Dowel Screws      Description      Duct connector, Metal, L 40 mm, Tube connection 5 mm      Duct connector, Metal, L 100 mm, Tube connection 5 mm	Type           A-22AP-A08           A-22D-A10           Type           A-22AP-A02           A-22AP-A04	



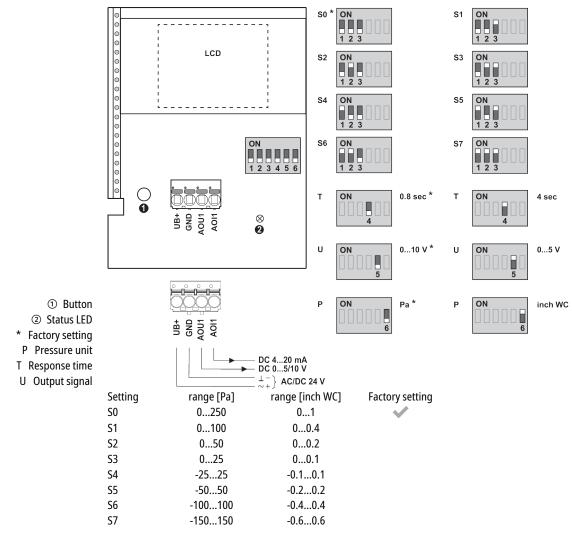


Wiring note power supply AC


For the sensor to function properly, polarity must be observed with a DC supply as well as an AC supply. If the AC supply is connected incorrectly, i.e. if the wires are reversed, this can lead to the destruction of the sensor.

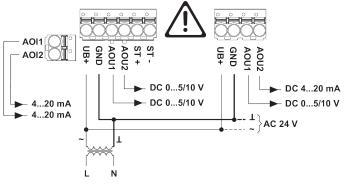

#### Dimensions



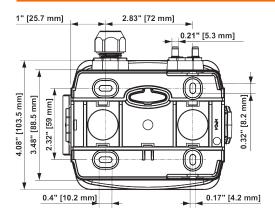

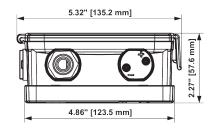

Туре	Weight
22ADP-18Q	0.38 kg
22ADP-18QA	-
22ADP-18QB	0.41 kg
22ADP-18QL	-