STC65+ RS485-Modbus

Bidirectional EnOcean gateways with RS485 interface



Datasheet

Subject to technical alteration Issue date: 3/28/2022 • A121







» APPLICATION

Bidirectional gateways with serial RS485 Modbus interface in IP65 enclosure. For connecting EasySens sensors or wireless switches to various controller models with RS485 interface. Transmission of custom programmable telegrams, incl. external receiving antenna (2.5 m).

» SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

Seite 2 / 4 Stand: 28.03.2022

»TECHNICAL DATA

Network technology	RS485					
Communication protocol (type-dependent)	Modbus (RTU / ASCII) RS485 bus load: 1 unit load according to RS485 standard (max. 32 devices)					
Radio technology	EnOcean (IEC 14543-3-10), transmission power <10 mW					
Frequency	902 MHz					
Antenna	external transmit- / receive antenna					
Data transmission	bidirectional					
Receive- transmit channels	32 (Rx) + 32 (Tx) + 32 (VA)	Rx = Recipient channels	Tx = Transmission channels	VA = Valve actuators		
Power supply	1524 V = (±10%) or 24 V ~ (±10%) SELV					
Power consumption	typ. 0,8 W (24 V =) 2 VA (24 V ~)					
Enclosure	enclosure USE-M, PC, pure white, cover PC, transparent					
Protection	IP65 according to EN 60529					
Cable entry	M25, for wire max. Ø=0.28 in., seal insert for fourfold cable entry					
Connection electrical	terminal block, max. 16AWG					
Ambient condition	-4+140 °F, max. 70% rH non-condensing					
Weight	without antenna 3.88 oz.					
Delivery content	external transmit- / receive antenna (
Notes	up to 15 devices with Smart Acknowledge (SmartACK), magnetic antenna holder required for better radio range					

» MOUNTING ADVICES

The module enclosure can be mounted directly onto a DIN top-hat rail using the mounting base or surface-mounted using dowels and screws.

- The antenna should be mounted at metallic objects, e.g. at an air tube behind a false ceiling or on a metal plate (minimum dimensions: 7.1 in. x 7.1 in., material: galvanized sheet steel, see accessories).
- In rooms the antenna should be at least 4 in. away from the ceiling.
- The antenna should be vertically aligned downwards.
- Minimal distance to the wall: 4 in.
- Distance to other transmitters (e.g. GSM/ DECT/ wireless LAN/ EnOcean sender): at least 20 in.
- The antenna cable shall be wired in an electric conduit.
- · A crushing of cable shall be absolutely avoided.
- The minimal bend radius of the extension cable is 2 in.
- As for the cable laying the use of an active pull-up device should be avoided, so to avoid any damages on the sheathing respectively on the connectors.

» COMMISSIONING

Radio sensors send time or event controlled telegrams to the receiver. The receiver verifies the incoming telegrams and output them directly via their interface. Each telegram allows a precise allocation and consists of the format: type of the telegram, data, sender-ID 32bit.

In order to assure a correct evaluation of the measuring values by the receiver, it is necessary to have the devices learned by the receiver. This is done automatically by means of a "learn button" at the sensor or manually by input of the 32bit sensor ID and a special "learning procedure" between sender and receiver. The respective details are described in the corresponding software documentation of the receiver.

»LED ERROR CODES


PWR	BUS	RAD	ERR	
•		х	●/□	faulty bus communication
0	•	0	•	faulty dipswitch setting
0	0	•	•	Error radio module

■ LED flashes ■ LED permanently ON ○ LED OFF

Stand: 28.03.2022 Seite 3 / 4

» CONNECTION CONFIGURATION - STC65+-RS485 MODBUS

Factory default: RTU, Address 1, 9600Bd, Parity even, Version 32Rx/8Tx

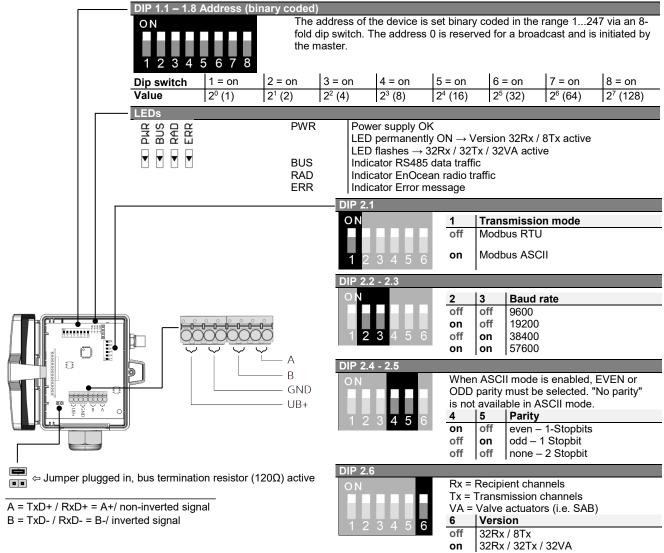

Interface description/ register specification



The configuration software and further information for parameterization of the Modbus gateway is available for download under the following link. Pay attention to the configured version. Depending on the setting (DIP 2.6), the appropriate documentation must be called up.

→ Download *.zip

»INFORMATION ABOUT EASYSENS® (RADIO) / ENOCEAN GENERAL INFORMATION





EasySens® - Enocean

Basic information about EasySens® radio and installation are found on our website.

»OVERVIEW OF THE RADIO TELEGRAMS





EEP

The structure of the data contained in the telegram are found in the EEP (EnOcean equipment profile) list provided by the EnOcean Alliance.

»INFORMATIONEN ABOUT EASYSENS® - AIRSCAN





EasySens® - Airscan Radio Signal strenght measuring software

Basic information about EasySens® - Airscan and installation are found on our website

Seite 4 / 4 Stand: 28.03.202

»INFORMATION ABOUT SMART ACKNOWLEDGE (SMARTACK)


This bi-directional communication mechanism also allows the building system to send back data to a sensor, i.e. to overwrite SR06LCD's set point. Smart Acknowledge requires that both communication devices do support the Smart Acknowledge mechanism.



Communication must be performed directly with a SmartACK capable receiver, e.g. STC65-FTT LON (SMACK special version) or STC65+ RS485 Modbus/EVC. Repeaters are not supported, they delay in the telegram transmission. Sensor and gateway must communicate directly with each other.

Additional Information of the used EEP's with Smart ACK can be found using the following link: → <u>Download PDF</u>

» DIMENSIONS (IN)

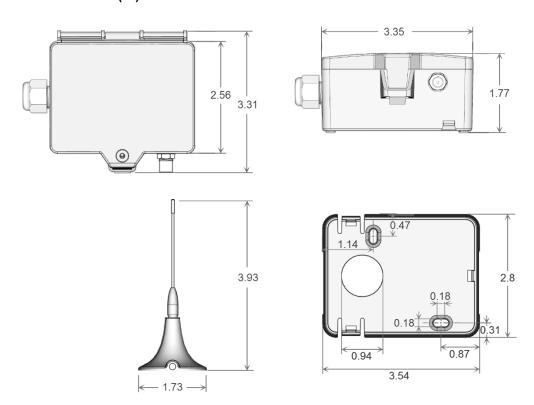

» ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base Item No. 631228
Mounting kit universal Item No. 698511

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

» ACCESSORIES (OPTIONAL)

Airscan USB Enocean Transceiver (902 MHz)

Antenna extension 10 m

Antenna extension 20 m

Antenna holder form L, 180x180 mm

Rawl plugs and screws

Item No. 257213

Item No. 255097

Item No. 102209