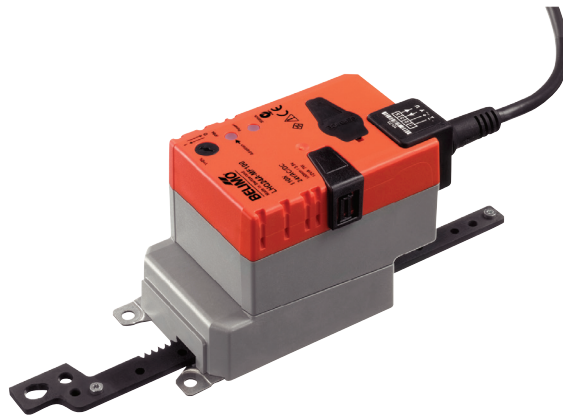


Configurable linear actuator for adjusting dampers and slide valves in technical building installations

- Air damper size up to approx. 0.7 m²
- Actuating force 100 N
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- Position feedback 2...10 V variable
- Length of Stroke Max. 100 mm, adjustable in 20 mm increments
- Running time motor 3.5 s variable


Technical data

| | | |
|-----------------------------------|--|---|
| Electrical data | Nominal voltage | AC/DC 24 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.2...28.8 V / DC 21.6...28.8 V |
| | Power consumption in operation | 13 W |
| | Power consumption in rest position | 2 W |
| | Power consumption for wire sizing | 23 VA |
| | Power consumption for wire sizing note | I _{max} 20 A @ 5 ms |
| | Connection supply / control | Cable 1 m, 4 x 0.75 mm ² |
| | Parallel operation | Yes (note the performance data) |
| | Functional data | Torque variable |
| Actuating force motor | | 100 N |
| Actuating force variable | | 25%, 50%, 75% reduziert |
| Operating range Y | | 2...10 V |
| Input Impedance | | 100 kΩ |
| Options positioning signal | | Open/close Modulating (DC 0...32 V) |
| Operating range Y variable | | Start point 0.5...30 V End point 2.5...32 V |
| Position feedback U | | 2...10 V |
| Position feedback U note | | Max. 0.5 mA |
| Position feedback U variable | | Start point 0.5...8 V End point 2.5...10 V |
| Position accuracy | | ±5% |
| Direction of motion motor | | selectable with switch |
| Direction of motion note | | Y = 0 V: with switch 0 (retracted) / 1 (extended) |
| Direction of motion variable | | electronically reversible |
| Manual override | | with push-button, can be locked |
| Stroke | | 100 mm |
| Length of Stroke | | Max. 100 mm, adjustable in 20 mm increments |
| Minimum stroke | | 40 mm |
| Stroke limitation | | can be limited on both sides with mechanical end stops |
| Running time motor | | 3.5 s / 100 mm |
| Running time motor variable | | 3.5...15 s / 100 mm |
| Adaptation setting range | | manual (automatic on first power-up) |
| Adaptation setting range variable | | No action Adaptation when switched on Adaptation after pushing the gear disengagement button |
| Override control | | MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50% |
| Override control variable | | MAX = (MIN + 32%)...100% MIN = 0%...(MAX - 32%) ZS = MIN...MAX |
| Sound power level, motor | | 56 dB(A) |
| Safety | | Protection class IEC/EN |
| | Protection class UL | UL Class 2 Supply |
| | Degree of protection IEC/EN | IP54 |

Technical data

| | | |
|---------------|--|---|
| Safety | Degree of protection NEMA/UL | NEMA 2 |
| | Enclosure | UL Enclosure Type 2 |
| | EMC | CE according to 2014/30/EU |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| | Certification UL | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1:02 |
| | Certification UL note | The UL marking on the actuator depends on the production site, the device is UL-compliant in any case |
| | Mode of operation | Type 1 |
| | Rated impulse voltage supply / control | 0.8 kV |
| | Control pollution degree | 3 |
| | Ambient temperature | -30...40 °C |
| | Ambient temperature note | Caution: +40...+50 °C utilisation possible only under certain restrictions. Please contact your supplier. |
| | Storage temperature | -40...80 °C |
| | Ambient humidity | Max. 95% r.H., non-condensing |
| Servicing | maintenance-free | |
| Weight | Weight | 0.77 kg |


Safety notes



- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The rotary supports and coupling pieces available as accessories and must always be used if transverse forces are likely. In addition, the actuator must not be tightly bolted to the application. It must remain movable via the rotary support (refer to «Assembly notes»).
- If the actuator is exposed to severely contaminated ambient air, appropriate precautions must be taken on the system side. Excessive deposits of dust, soot etc. can prevent the gear rod from being extended and retracted correctly.
- If not installed horizontally, the gear disengagement push-button may only be actuated when there is no pressure on the gear rod.
- To calculate the actuating force required for air dampers and slide valves, the specifications supplied by the damper manufacturers concerning the cross section, the design, the installation site and the ventilation conditions must be observed.
- If a rotary support and/or coupling piece is used, actuation force losses are to be expected.
- Self-adaptation is necessary when the system is commissioned or whenever the stroke limiting is adjusted (press the adaptation push-button).
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

| | |
|------------------------------------|--|
| Mode of operation | The actuator is connected with a standard modulating signal of 0...10 V and drives to the position defined by the positioning signal. Measuring voltage U serves for the electrical display of the damper position 0.5...100% and as slave control signal for other actuators. |
| Parametrisable actuators | The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU. |
| Simple direct mounting | The actuator can be directly connected with the application using the enclosed screws. The head of the gear rod is connected to the moving part of the ventilating application individually on the mounting side or with the Z-KS2 coupling piece provided. |
| Manual override | Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked). |
| Adjustable stroke | If a stroke limitation will be adjusted, the mechanical operating range on this side of the gear rod can be used starting with an extension length of 20 mm and then can be limited respectively in increments of 20 mm by means of mechanical end stops Z-AS2. A minimum permissible stroke of 40 mm must be allowed for. |
| High functional reliability | The actuator is overload protected, requires no limit switches in intermediate positions and automatically stops when the end stop is reached (at rest). |
| Home position | The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaption, which is when the operating range and position feedback adjust themselves to the mechanical setting range. The detection of the mechanical end stops enables a gentle approach to the end positions, thus protecting the actuator mechanics. The actuator then moves into the position defined by the positioning signal. |



| | |
|-------------------------------------|---|
| Adaption and synchronisation | An adaption can be triggered manually by pressing the "Adaption" button or with the PC-Tool. Both mechanical end stops are detected during the adaption (entire setting range). Automatic synchronisation after pressing the gearbox disengagement button is configured. The synchronisation is in the home position (0%). The actuator then moves into the position defined by the positioning signal. A range of settings can be adapted using the PC-Tool (see MFT-P documentation) |
|-------------------------------------|---|

Accessories

| | Description | Type |
|-------------------------------|---|----------|
| Electrical accessories | Signal converter voltage/current 100 kΩ Supply AC/DC 24 V | Z-UIC |
| | Range controller for wall mounting | SBG24 |
| | Positioner for wall mounting | SGA24 |
| | Positioner for built-in mounting | SGE24 |
| | Positioner for front-panel mounting | SGF24 |
| | Positioner for wall mounting | CRP24-B1 |
| | Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin service socket for Belimo device | ZK1-GEN |
| | Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal | ZK2-GEN |
| | Description | Type |
| Mechanical accessories | End stop kit, Multipack 20 pcs. | Z-AS2 |
| | Rotary support, for linear actuator | Z-DS1 |
| | Coupling piece M6 | Z-KS2 |
| | Description | Type |
| Service Tools | Service Tool, with ZIP-USB function | ZTH EU |
| | Belimo PC-Tool, Software for adjustments and diagnostics | MFT-P |
| | Adapter for Service-Tool ZTH | MFT-C |

Electrical installation




Notes

- Connection via safety isolating transformer.
- Parallel connection of other actuators possible. Observe the performance data.

Wiring diagrams


AC/DC 24 V, modulating

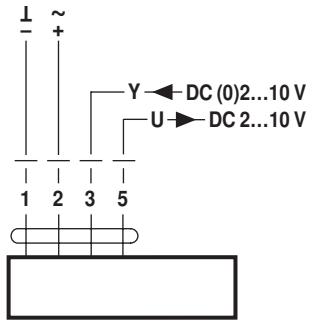

Cable colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange

Signal cable lengths

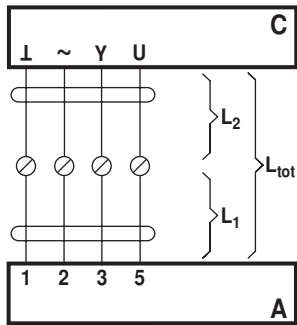


| L ₂ ┴ / ~ | L _{tot} = L ₁ + L ₂ | |
|-------------------------|--|-------|
| | AC | DC |
| 0.75 mm ² | ≤30 m | ≤5 m |
| 1.00 mm ² | ≤40 m | ≤8 m |
| 1.50 mm ² | ≤70 m | ≤12 m |
| 2.50 mm ² | ≤100 m | ≤20 m |

- A = Actuator
- C = Control unit (controlling unit)
- L₁ = Connecting cable of the actuator
- L₂ = Customer cable
- L_{tot} = Maximum signal cable length

Note:

When several actuators are connected in parallel, the maximum signal cable length must be divided by the number of actuators.

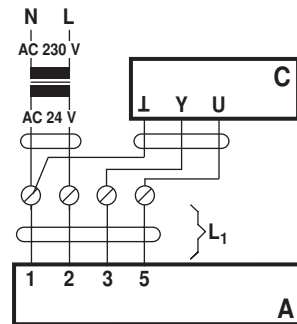

- A = Actuator
- C = Control unit (controlling unit)
- L₁ = Connecting cable of the actuator


Note:

There are no special restrictions on installation if the supply and the data cable are routed separately.

Functions


Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

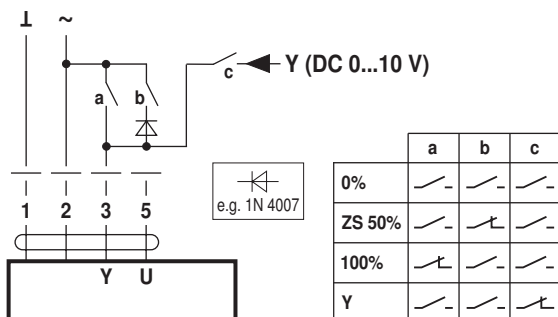


| | a | b | c |
|--------|-----|-----|-----|
| 0% | ┌── | ┌── | ┌── |
| ZS 50% | ┌── | ┌── | ┌── |
| 100% | ┌── | ┌── | ┌── |
| Y | ┌── | ┌── | ┌── |

Override control with AC 24 V with rotary switch

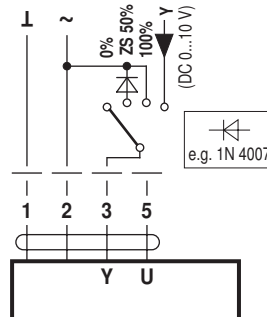


Functions


Control remotely 0...100% with positioner SG..
 positioner SG..

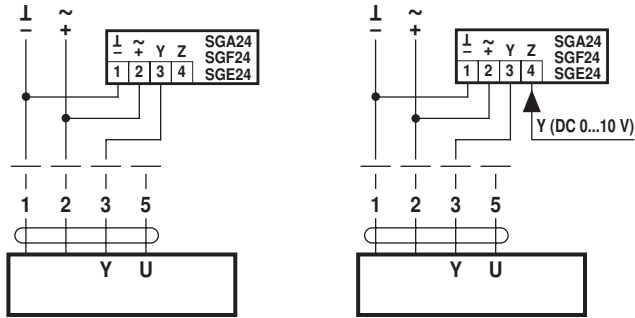


Control with 4...20 mA via external resistor

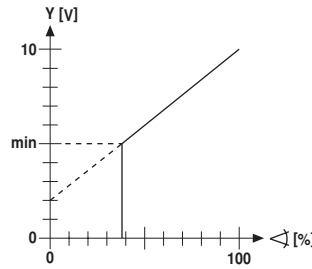

Functional check

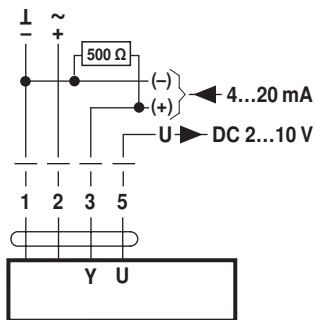

Caution:
 The operating range must be set to DC 2...10 V.
 The 500 Ω resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V

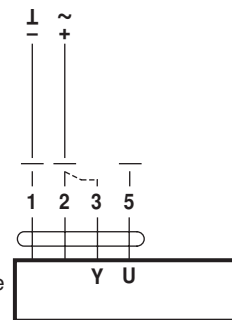


Procedure

1. Apply 24 V to connection 1 and 2
2. Disconnect connection 3:
 - for direction of stroke 0: Actuator travels in the direction "retracted"
 - for direction of stroke 1: Actuator travels in the direction "extended"
3. Short circuit connections 2 and 3:
 - Actuator runs in the opposite direction


Functions for devices with specific parameters (Parametrisation necessary)

Override control and limiting with AC 24 V with relay contacts

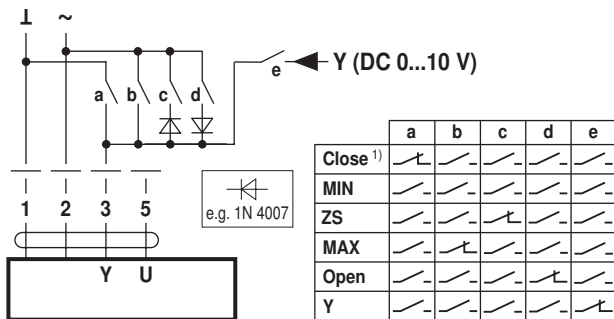


Control open/close


Override control and limiting with AC 24 V with rotary switch

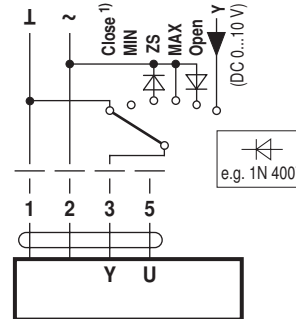

1) **Caution:** This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.

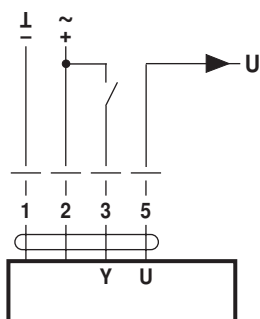

Operating controls and indicators

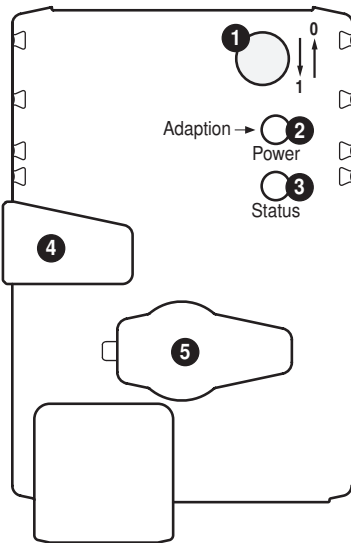

1 Direction of stroke switch

Switch over: Direction of stroke changes

2 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers stroke adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronising process active

Press button: No function

4 Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible

Release button: Gear engages, synchronisation starts, followed by standard mode

5 Service plug

For connecting parameterisation and service tools

Check power supply connection

2 Off and 3 On Possible wiring error in power supply

Installation notes



Notes

- If a rotary support and/or coupling piece is used, losses in the actuation force losses are to be expected.

Applications without transverse force

The linear actuator is screwed directly to the housing at three points. Afterwards, the head of the gear rod is fastened to the moving part of the ventilation application (e.g. damper or slide valve).

Applications with transverse forces

Connect the coupling piece with the internal thread (Z-KS2) to the head of the gear rod. Screw the rotary support (Z-DS1) to the ventilation application. Afterwards, the linear actuator is screwed to the previously mounted rotary support with the enclosed screw. Then, the coupling piece, which is mounted to the head of the gear rod, is attached to the moving part of the ventilating application (e.g. damper or slide valve). The transverse forces can be compensated for to a certain limit with the rotary support and/or coupling piece. The maximum permissible swivel angle of the rotary support and coupling piece is 10°, laterally and upwards.

Negative torque

Max. 50% of the actuating force (Caution: Application possible only under certain restrictions. Please contact your supplier.)


Service

Service Tools connection

The actuator can be parametrised by ZTH EU via the service socket.

For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool

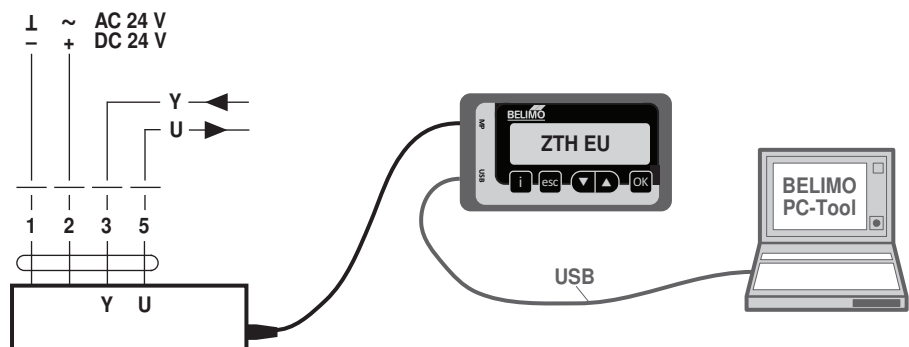

Dimensions [mm]

Dimensional drawings

